

Auxiliary source

1. To select auxiliary mode, connect your auxiliary source (e.g. mp3 player) to the AUX input jack at the back of the ARS70 with a 3.5mm audio in cable (not supplied).
2. The green LED will turn on. Control all other playback operations from your auxiliary player.
3. To switch back to the *Bluetooth* connection, disconnect the 3.5mm cable from the AUX input jack at the back of the audio system.

The 3.5mm audio direct connection suspends any *Bluetooth* streaming audio you're listening to. The ARS70 plays only the direct connect audio when you have something connected to the AUX input jack.



Troubleshooting tips

Q: Cannot turn on the ARS70 when charging.

A: The ARS70 will shut down to protect itself from damage when charging is overloaded. To resume operation, disconnect the USB connection and turn on the ARS70 again.

Q: Streaming stops and the Power LED turns off when plugging in device to the USB jack.

A: The ARS70 will shut down to protect itself from damage when charging is overloaded. To resume operation, disconnect the USB connection and turn on the ARS70 again.

Q: No sound or sound is very low.

A: Make sure the *Bluetooth* wireless connection is correct and playback has been successfully started. Check the volume level of your *Bluetooth* device.

- Make sure you have disconnected the 3.5 mm audio in cable from the AUX input jack.

Q: My paired *Bluetooth* device can not reconnect to the ARS70.

A: Press and hold **PAIR** to enter Pairing mode again. A reconnection may fail due to :

- The pairing information has been deleted from your *Bluetooth* device.
- You may have exceeded the allowable number of paired devices for the ARS70. Only 8 *Bluetooth* devices may have their pairing credentials stored at one time. Simply follow the above instructions for Pairing to have a device paired again. However remember that the ARS70 can only store credentials for 8 devices. Therefore the earliest paired device will be removed from that list of 8 to make room for the device you wish to Pair.

Warranty information

12 Month Limited Warranty Applies to AR Audio Systems

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media

Warranty information

players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume

for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings.

**Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788**

1-800-645-4994

For Canada Customers, please ship to:
Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5