



## user manual guide de l'utilisateur manual de usuario

### Product registration

Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products but if you ever need service or have a question, our customer service staff stands ready to help. Contact us at [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com).

**PURCHASE REGISTRATION:** Registering On-line will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act. **Register Online at: [WWW.RCAAUDIOVIDEO.COM](http://WWW.RCAAUDIOVIDEO.COM). Click on Product Registration and Fill Out the Brief Questionnaire.**

### Enregistrement du produit

Merci d'avoir acheté un produit RCA. Nous sommes fiers de la qualité et de la fiabilité de tous nos produits électroniques, mais en cas de nécessité de réparation ou pour toute question, le personnel de notre service clientèle est prêt à vous aider. Contactez-nous sur [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com). **ENREGISTREMENT D'ACHAT:** Enregistrer votre produit en ligne nous permettra de communiquer avec vous pour tout avis de sécurité au sujet du produit en vertu du Federal Consumer Safety Act (Loi fédérale de protection du consommateur). **Enregistrez votre produit en ligne sur: [WWW.RCAAUDIOVIDEO.COM](http://WWW.RCAAUDIOVIDEO.COM). Cliquez sur Enregistrement produit et remplissez le court questionnaire.**

### Enregistramiento del producto

Gracias por comprar un producto RCA. Nos enorgullece la calidad y fiabilidad de todos nuestros productos electrónicos, pero si alguna vez necesita servicios técnicos o si tiene alguna pregunta, nuestro personal de atención al cliente está a su disposición para ayudarle. Comuníquese con nosotros en [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com). **REGISTRO DE COMPRA:** El registro en línea nos permitirá comunicarnos con usted en el caso de tener que enviarle algún aviso de seguridad en virtud de la Ley Federal de Seguridad del Consumidor. **Registre el producto en línea en: [WWW.RCAAUDIOVIDEO.COM](http://WWW.RCAAUDIOVIDEO.COM). Haga clic en Registro del producto y responda al cuestionario.**

 
### EN/F/E

It is important to read this user manual prior to using your new product for the first time.

*Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.*

*Es importante leer este manual antes de usar por vez primera su equipo.*

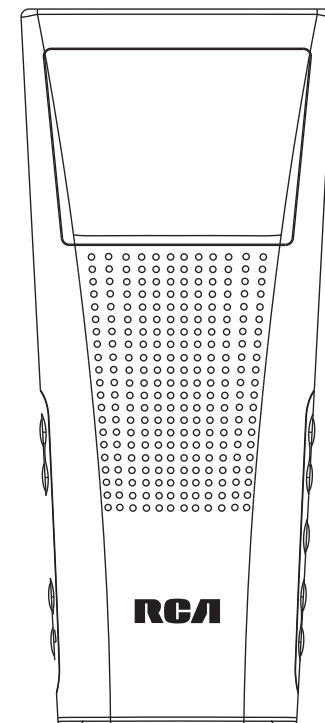

### BRC10 series



# English

# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN  CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

**WARNING:** THIS PRODUCT IS DESIGNED TO RESIST SMALL ACCIDENTAL SPLASHES WHICH MAY OCCUR ON KITCHEN OR BATHROOM COUNTER TOPS. HOWEVER, DO NOT SUBMERGE OR EXPOSE THIS PRODUCT TO THE DIRECT SPRAY FROM A BATHROOM SHOWER OR TO HEAVY RAIN. IT IS NOT RECOMMENDED TO USE THIS PRODUCT OUTDOORS.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been submerged or exposed to excessive moisture, does not operate normally, or has been dropped.

## ADDITIONAL SAFETY INFORMATION

- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.

## Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.

- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

**WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

## Precautions for the unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problems may result.
- Do not store the unit near fire, places with high temperature or in direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

## FCC Information

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Technical specification

Power source:

- 2 x AA batteries

## Before you begin

### Installing the battery

 
- Unlock the battery compartment with a screwdriver. Remove the compartment door.
- Observe the polarities and place two AA batteries (not included) in the compartment.
- Replace the compartment door and lock it in place using a screwdriver. Be careful not to over tighten the screw.

This product is designed to resist small accidental splashes which may occur on kitchen or bathroom counter tops. However, do not submerge or expose this product to the direct spray from a bathroom shower or to heavy rain. It is not recommended to use this product outdoors.



## General controls

### Front/Back view

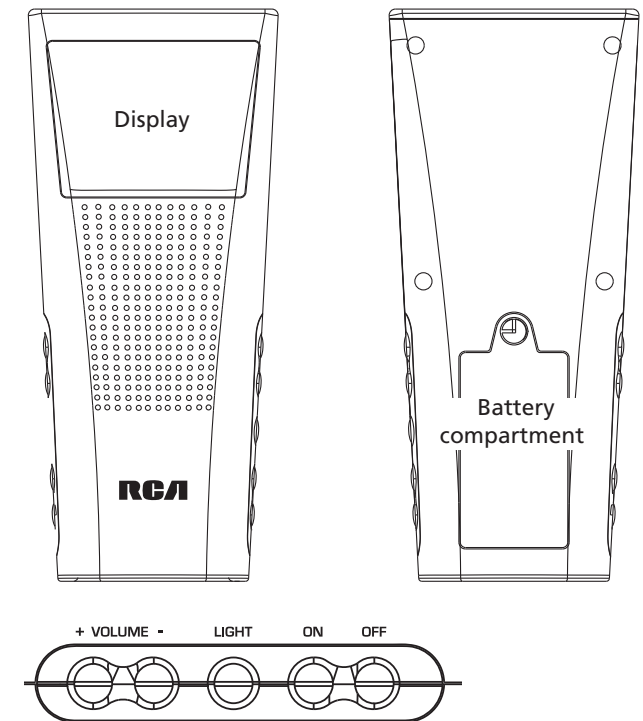

### Right view

 
**-VOLUME+** – Adjust volume

**LIGHT** – Switch on/off the display backlight

**ON** – Turn the unit on

**OFF** – Turn the unit off

## Clock

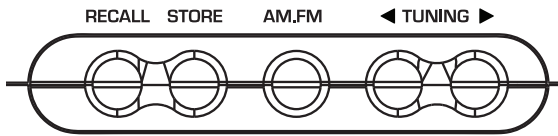


### Left view

**RECALL** – Recall a stored radio station

**STORE** – Store a radio station

**AM/FM** – Switch between AM/FM band

 **◀ TUNING ▶** – Select radio frequencies; select Preset location; select station in Recall mode

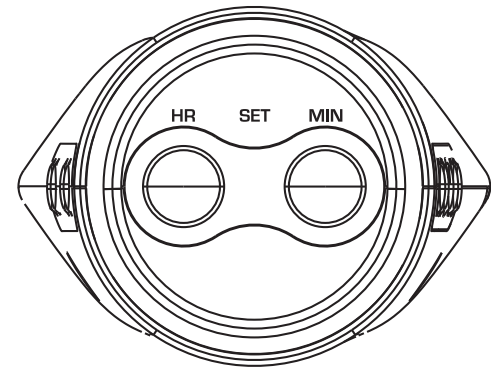

### Bottom view

**HR** – Enter clock set mode; adjust hour in clock set mode

**MIN** – Enter clock set mode; adjust minute in clock set mode

## Radio

### Setting clock manually

1. Press **HR** or **MIN** to enter clock set mode.
2. Press **HR** to set the hour.
  - The clock is in 12 hour format. The PM indicator appears to show PM time.
3. Press **MIN** to set the minute.
4. Press **ON, OFF, AM/FM, ◀ TUNING ▶, RECALL, STORE** or **-VOLUME+** to confirm and exit clock setting mode.

## Radio

### Turning on/off the Radio

Press **ON** to turn on the radio. Press **OFF** to turn off the radio.

### Selecting radio band

In radio mode, press **AM/FM** to select the radio band (AM/FM). The selected radio band icon lights on the display.

### Tuning the radio

Press **◀ TUNING ▶** to adjust the radio frequency. Press and hold **◀ TUNING ▶** for two seconds to automatically search for the next available station.

### Built-in AFC

The Built In Automatic Frequency Control (AFC) helps to reduce drift

on FM reception and keeps the radio locked in on the FM station to which it is tuned.

### Station presets

**To store a station as preset:**

1. Tune to a radio station.
2. Press **STORE**.
  - Preset location *P01* shows on the display.
3. Press and hold **◀ TUNING ▶** to select a desired preset location (P1 - P10).
4. Press **STORE**.
  - You can save up to 10 preset stations.

**To recall a preset station:**

1. In radio mode, press **RECALL**.
  - The existing preset station number shows on the display.
2. Press **◀ TUNING ▶** to select a desired preset station.

## Display backlight

Press **LIGHT** to switch on/off the display backlight.

Note that backlight will turn off after 10 minutes.

When the Display Backlight fails to illuminate, this is probably a sign that your batteries are getting weak, and they should be replaced soon.



## Warranty information

### 12 Month Limited Warranty Applies to RCA Clock Radios

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable

memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR

ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### Recommendations before returning your product for a warranty claim:

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned with factory default settings. Consumer will be

responsible to restore any personal preference settings.

**Audiovox Electronics Corp.**  
**Attn: Service Department.**  
**150 Marcus Blvd.**  
**Hauppauge N.Y. 11788**

1-800-645-4994

For Canada Customers, please ship to:  
Audiovox Return Centre  
c/o Genco  
6685 Kennedy Road,  
Unit#3, Door 16,  
Mississauga, Ontario  
L5T 3A5