



 
# QuickStartGuide



M21/M22 series  
www.rcaaudiovideo.com

**Congratulations on purchasing your new RCA Player.**  
Please read these instructions for quick tips on using the player.

## Getting started

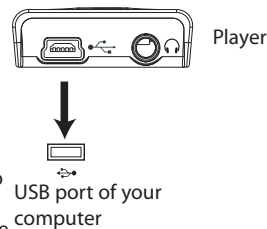1. Connect the player to your PC as shown.

 



- The RCA easyRip™ Media Software installer is stored in the player, go to **MyComputer** in the Start menu, find and open the drive letter associated with the player (i.e. LYRA) and then double-click the **rcaeasyrip\_setup** file to launch the installer. The player charges automatically every time you connect it to your computer.
  - It should be **charged for at least 3 hours** before using for the first time.
- Transfer audio files to your player using either of the two methods below:
  - RCA easyRip:** Helps to rip CD's, create playlists, load content and manage your library with an intuitive and modular design. Click the easyRip icon (  ) on your PC desktop to launch the software.
  - For details in using RCA easyRip, click the **Help** icon (  ) on the module dock.

\* RCA easyRip is currently not compatible with DRM files and Audiobooks.

v4.0 (1.0.4.0) (EN/E)

- Windows Explorer:** Simply drag and drop media files onto the drive letter associated with the player.
  - Your RCA Player is also compatible with most PC music management softwares.

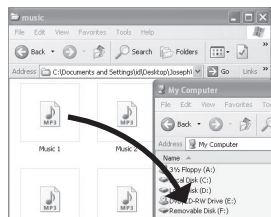

- Disconnect the player from your PC by clicking the **Safely Remove Hardware** icon (  ) in the system tray (located in the lower right corner of your screen) and selecting the player from the list of devices, then unplug the player from the PC.

\* The latest software can be downloaded from [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com).  
Windows is a registered trademark of Microsoft Corporation in the United States and other countries.


## Learn more about the player



 - To view the user manual directly from the player:**
  - Click **Start**.
  - Click **My Computer** (XP users) / Click **Computer** (Vista and 7 users).
  - Find and open the drive letter associated with the player (i.e. LYRA) and then open User Manuals folder.
  - From the User Manuals folder, select the user manual in your preferred language for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).

- Keep player out of direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.**



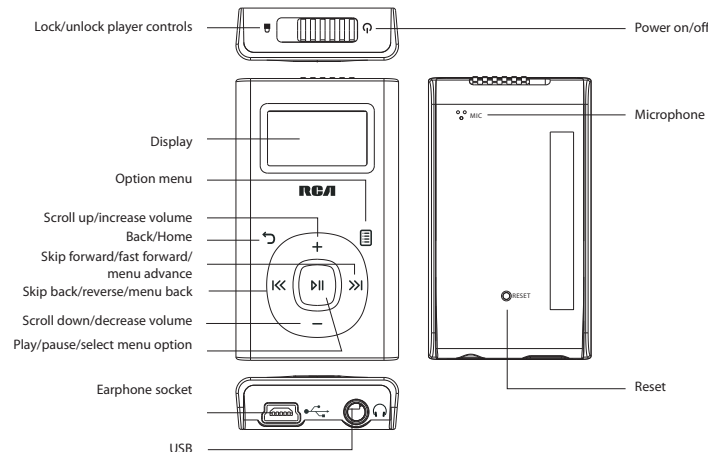

**Need more help?** Do not return this product to the store.  
Visit [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com) for the latest firmware, RCA easyRip Media Software, user manual and FAQ's.


## General controls









 





- Turn the player on/off: Slide  to the right
- Go to the Home menu (to access Music, Audiobooks, Voice Memo, Favorites and Settings): Press and hold 

Navigate to an audio file

In the Home menu, press  or  to go back or advance in the player menu and press  or  to scroll up or down to the desired file



Play an audio file	Press  or 
Pause playback	Press  at the playback (Now playing) screen, press again to resume
Show the Option menu	Press 
Adjust the volume	Press  or  at the playback (Now playing) screen
Skip to the next file (or section of audiobooks*)	Press 
Skip to the previous file (or section of audiobooks*)	Press  within the first 4 seconds of the current audio file
Reverse or fast forward an audio file	Press and hold  or  during playback
Lock the keys	Slide  to the left. To unlock, slide  to the middle position.
Delete files from the player	Refer to page 17-22 of the user manual
Reset the player	Press the RESET button on the back of the player with a non-metal pointed object (e.g. toothpick).

\* Refer to the user manual for information on section skipping for audiobooks.



Audiovox Electronics Corp.  
150 Marcus Blvd., Hauppauge, NY 11788  
© 2010 Audiovox Electronics Corp.  
Trademark Registered  
Printed in China