



# QuickStartGuide

 
M45/M46 series  
www.rcaaudiovideo.com

**Congratulations on purchasing your new RCA Player.**  
Please read these instructions for quick tips on using the player.

A comprehensive User Manual in your selected language (English, Spanish, or French) will be copied to your PC as part of the easyRip software installation. You can find the User Manual PDF file as a shortcut on your desktop. The User Manual PDF file can also be found in the player memory under the User Manuals folder.

## Getting Started

1. Connect your player to your computer.

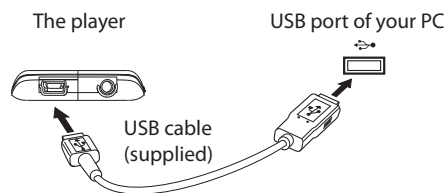


- The RCA easyRip™ Media Software installer is stored on the player. Go to **My Computer** in the Start menu, find and open the drive letter associated with the player (i.e. RCA MP3) and then double-click the **rcaeasyrip\_setup.exe** file to launch the installer.
- The player charges automatically every time you connect it to your computer. It should be **charged for at least 3 hours** before using for the first time.

\* The latest software can be downloaded from [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com).  
\*\* RCA easyRip is currently not compatible with DRM files and Audiobooks.

v2.0 (2.0.2.0) (EN/F)

2. Transfer audio/video/picture files to your player with either of the two methods below:

 - RCA easyRip:** Helps to rip CD's, create playlists, load content and manage your library with an intuitive and modular design. Click the easyRip icon ( ) on your PC desktop to launch the software.
  - For details in using RCA easyRip, click the **Help** icon ( ) on the module dock.
- Windows Explorer:** drag-and-drop audio/image files to the **Internal Storage** folder (Windows Vista™, Windows® 7) or the **Music** or **Photo** folder (Windows® XP) of the player.
  - Video files must be transferred via easyRip, which automatically converts files to the RCA MP3's optimal format.

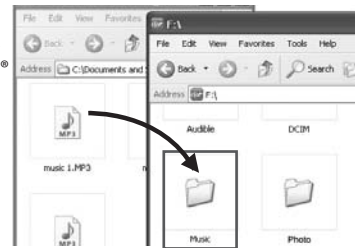

- The player is also compatible with most PC music management software.
- Secure music transfer requirements:** to enable function of transferring subscription music content to the player, please select MTP (Media Transfer Protocol) mode under Protocol in the player's Settings menu. Refer to "Settings" section in the User Manual for instruction on how to change Protocol modes.

3. Disconnect the player from the computer and enjoy media on the go.

### IMPORTANT:

- Video files must be converted and transferred via RCA easyRip for playback on your player.
- Video, photo, and audiobooks must be transferred while the player is in MSC mode to their respective folders on the player to ensure proper detection and playback.

\* Keep player out of direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

## Subscription Content Transfer

The player must be in MTP mode for subscription content transfer. Use the software provided by the online music store for content transfer. Refer to "Settings" section in the User Manual for instruction on how to change Protocol modes.

 
### Learn more about the player

- To view the user manual directly from the player:**
  - Step 1: Click **Start**.
  - Step 2: Click **My Computer** (XP users) / Click **Computer** (Vista and 7 users).
  - Step 3: Find and open the drive letter associated with the player (i.e. RCA MP3) and then open User Manuals folder.
  - Step 4: From the User Manuals folder, select the user manual in your preferred language for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).

### Need more help? Do not return this product to the store.

Visit [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com) for the latest firmware, RCA easyRip Media Software, user manual and FAQ's.

## General controls

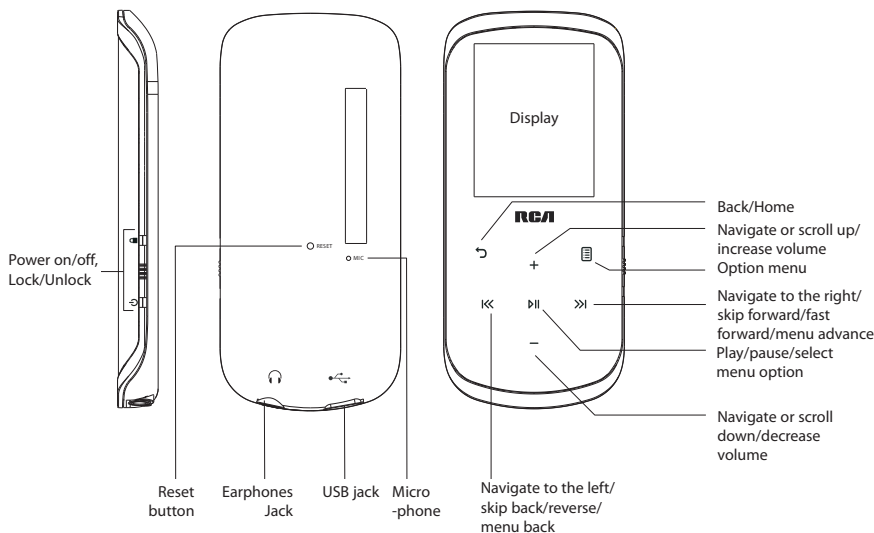

Turn the player on/off

Slide and hold the Power/Lock Slider ( ) towards the headphone jack.

Lock/Unlock the keys

 
Lock player controls: Slide the Power/Lock Slider ( ) away from the headphone jack.  
Unlock player controls: Slide the Power/Lock Slider ( ) toward the middle position.

Go to the Home menu (to access Music, Pictures, Videos, Radio, Audiobooks, Favorites, Voice Memo and Settings)

Press and hold to display the Home menu.

Navigate to an audio/video/picture file

In the Home menu, Press + or - and << or >> to select the player menu and press + or - to scroll up or down to the desired file

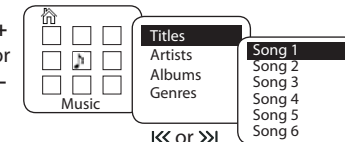

Play an audio/video/picture file

Press or >>

Pause playback

Press at the playback (Now Playing) screen, press again to resume

Show the Option menu

Press

Adjust the volume

Press + or - at the playback (Now Playing) screen

Skip to the next file (or section of audiobooks\*)

Press >>

Skip to the previous file (or section of audiobooks\*)

Press << within the beginning 4 seconds of the current audio file

Reverse or fast forward an audio file

Press and hold << or >> during playback

Delete files from the player

Refer to Music, Videos, Pictures, Audiobooks, Radio, Favorites and Voice Memo sections of the user manual.

Reset the player (if it is not responding)

Press the **RESET** button on the back of the player with a non-metal pointed object (e.g. toothpick).

\* Refer to the user manual for information on section skipping for audiobooks.



Visit <http://store.audiovox.com> to find the best accessories for your products.

© 2010 Audiovox Accessories Corporation  
111 Congressional Blvd., Suite 350  
Carmel, IN 46032  
Product Information, Photos, FAQ's, User Manual  
Trademark Registered  
Printed in China