 


General controls

Right view
-VOLUME+ -
Adjust volume

TUNING -
Select radio frequencies

AUX IN -
Auxiliary input jack



Back view
BRIGHTNESS
- Select display brightness (Hi or Lo)

TIME ZONE
- Press repeatedly to select a time zone

DST - Turn daylight saving function on or off



Clock

Setting clock manually

- Slide the /WAKE1/WAKE2/ switch to to enter the clock setting mode.
- Press **◀ REV** or **FWD ▶** to set the time.
- Press and hold to decrease or increase the time value quickly.
- The ":" flashes on the display in clock setting mode.
- The clock is in 12 hour format. The AM indicator lights to show AM time.
- Slide the /WAKE1/WAKE2/ switch to .

See giftbox for instructions on how to use the Automatic Time Set feature.



Radio

Selecting radio mode

Press **RADIO/AUX** to turn on the radio.

Tuning the radio

Rotate the **TUNING** knob on the right of the unit to adjust the radio frequency. Radio frequency shows on the display.

Built-in AFC

The Built In Automatic Frequency Control (AFC) helps to reduce drift on FM reception and keeps the radio locked in on the FM station to which it is tuned.

This unit is equipped with an FM antenna at the back. Uncoil the antenna to its full length for best reception. Tape the end of the antenna onto the wall if possible to improve reception.

Wake function

Setting wake time

- Slide the /WAKE1/WAKE2/ switch to select **WAKE 1** or **WAKE 2** setting mode.
- Press **◀ REV** or **FWD ▶** to set the wake time.
- Press and hold to decrease or increase the time value quickly.
- The ":" flashes on the display in wake time setting mode.
- The clock is in 12 hour format. The AM indicator lights to show AM time.
- Slide the /WAKE1/WAKE2/ switch to .

Selecting wake source

You may be woken up by radio or alarm.

- Press **WAKE** - **OFF 1** or **2** repeatedly to select your choice of wake source (alarm / radio).
- The corresponding wake setting icon will light when alarm is set to activate.

Wake function

Wake to alarm

The unit is equipped with GRAD-U-WAKE. The alarm volume will increase gradually to its maximum in about 30 to 45 seconds.

Wake to radio

To set wake radio station:

- Select radio band.
- Select desired station.
- Adjust the volume by **+ VOL -**.

Checking wake time

Slide the /WAKE1/WAKE2/ switch to **WAKE 1** or **WAKE 2** to check the set wake time.

Ways to turn off alarm

- To silence the wake function momentarily, press **SNOOZE**. The alarm or radio will be on again when the snooze period (default: 9 minutes) is over. (see SmartSnooze™ section for more info)
- To turn off the alarm, press **OFF**. The wake alarm or radio will activate again the next day.
- To disable the wake function completely, press **WAKE** - **OFF 1** or **2** repeatedly until no wake mode icon shows on the display.

SmartSnooze™

- This operation allows extra sleep time when the alarm sounds. The alarm can be turned off temporarily by pressing **SNOOZE**, **NAP**, **SLEEP**, **◀ REV** or **FWD ▶** until the snooze period is over.
- Snooze function can be used repeatedly up to 30 minutes. After this, the alarm will turn off until the next alarm conditions are met.
- SmartSnooze™ will be activated only when the /WAKE1/WAKE2/ switch is set to .

To set the "quiet" period with Snooze:

- Press and hold **SNOOZE**.
- Press **◀ REV** or **FWD ▶** to adjust snooze time. Then release **SNOOZE** button to save the setting.

Sleep function

In sleep mode, the unit will turn off automatically after a specified time (up to 2 hours).

- Press and hold **SLEEP**.
- While holding **SLEEP**, press **◀ REV** or **FWD ▶** to set the time for sleep mode. The time range is up to 2 hours. The radio will then be switched on.
- To view remaining time in sleep mode, press and hold **SLEEP**.
- To cancel the sleep function, press **SNOOZE** or **OFF**.

NAP function

For catnaps up to 2 hours without disturbing the regular alarm settings, the NAP function wakes you up after a short period of time.

To set the NAP time:

- Press **NAP** once and the NAP icon will flash on the display. Press **NAP** repeatedly to set the NAP time (each press decreases or increases duration by 10 minutes. When you first set the NAP time, the first default value is 20 minutes).
- The current time shows after a few seconds if no button is pressed. The icon **NAP** lights on the display.
- To check remaining NAP time, press **NAP** once to show briefly the NAP time left with the NAP icon flashing on the display.
- When the alarm sounds, press **SNOOZE** to switch it off.
- To cancel the function before the nap time ends, press and hold **NAP** until no nap icon shows on the display.

Auxiliary source

- Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the right side of the unit with an audio cable (not included).
- Turn on the unit and your auxiliary source.
- Press **RADIO/AUX** to switch to listen to auxiliary source. The AUX indicator on the front will turn on. Press again to switch back to listen to the radio.

Brightness control

Slide **BRIGHTNESS** switch on the back of the unit to **Hi** (high) or **Lo** (low) position to adjust the brightness of the display.

Warranty information

12 Month Limited Warranty Applies to RCA Clock Radios

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY

LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings.

Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788

1-800-645-4994

For Canada Customers, please ship to:
Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.