

IMPORTANT SAFETY INSTRUCTIONS

RCA

user manual
guide de l'utilisateur

RC180i

Made for
 iPod  iPhone

Conçu pour
 iPod  iPhone



EN/F

It is important to read this user manual prior to using your new product for the first time.
Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

FCC information

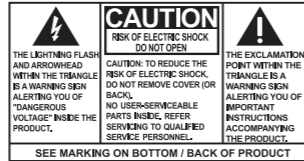
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the

other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.



Portable Cart Warning

When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been

exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected

from the mains.

- AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candle, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.

Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.

"Made for iPod" and **"Made for iPhone"** mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Electrical consumption

SWITCHING ADAPTER POWER SUPPLY:
AC INPUT: 100 - 240 V AC - 50/60 Hz
DC OUTPUT: 8 V DC, 2.2 A

Before you begin

The first time you dock your iPhone or iPod touch, you'll be prompted to download the free RCA N-hance App from the iTunes store. You are encouraged to download and install this app (right on your iPhone or iPod touch) in order to enjoy the wide variety of features which are available with N-hance. Instructions on how to use the N-hance App can be found in the About section inside the app.

- App is for iPhone/iPod touch only (iOS 3.2 or higher).
- Note the N-hance App must be running in order for the dock to properly sync to your iPhone or iPod touch. Furthermore, the app must be running and visible for proper operation of all the N-hance features such as personalized alarms, weather, etc, etc. Launch the N-hance App by touching the N-hance icon on your iPhone or iPod touch either just before or just after docking.
- Note that the dock display will be turned off when the app is showing a clockface.
- Refer to the User Guide found within the N-hance App for more detailed information.



Plugging in for power

- Connect the supplied power adapter to the unit's DC jack, and connect to a convenient wall outlet.
- This clock can also be powered by 4 "AA" batteries. Refer to "Operating by batteries" section for details.
- Refer to the "Clock" section and follow the instructions to get the clock time shown correctly with the Auto Clock set feature.

Battery back-up operation

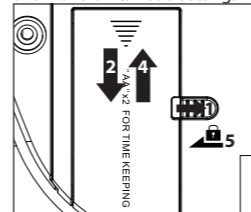
This clock radio is equipped with a timekeeping system that can be powered with 2 "AA" batteries (included and installed). The power failure protection circuit will not operate unless battery is installed. When normal household power is interrupted, or AC line cord is unplugged, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.

To install or replace the batteries:

1. Sliding the lock switch which located at the bottom of the clock radio to the right.

2. Apply thumb pressure to the tab on battery door and then open the door.
3. Insert or replace 2 AA batteries.
4. Close the compartment door.

5. Sliding the lock switch to the left to lock.
- It is recommended that you replace the batteries every year.
- It is recommended to plug the unit for AC power while replacing batteries to avoid the loss of clock and wake time/mode settings.



Power failure indicator

When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was

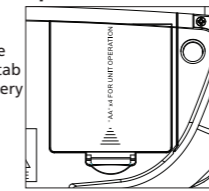
interrupted and you should readjust the time and alarm settings.

Operating by batteries

This clock radio can be powered by 4 "AA" batteries (not included).

To install or replace the batteries:

1. Apply thumb pressure to the tab on battery door which located at the bottom of the clock radio and then lift the door out and off the cabinet.
2. Insert or replace 4 AA batteries.
3. Replace the compartment door.




Use Alkaline batteries for best results.



General controls

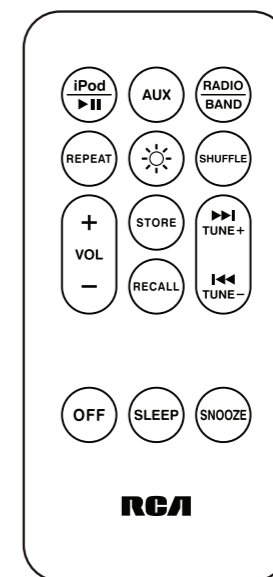Remote control



iPod/▶|| – Select iPod mode; start or pause playback

AUX – Select AUX mode

RADIO/BAND – Select RADIO mode; select radio band

REPEAT – Select repeat playback mode for iPod/iPhone

 – Adjust display brightness

SHUFFLE – Select random playback mode for iPod/iPhone

VOL + / - – Adjust volume

STORE – Save radio stations as presets

RECALL – Recall preset radio stations

◀◀ or ▶▶ / TUNE +/- – Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period

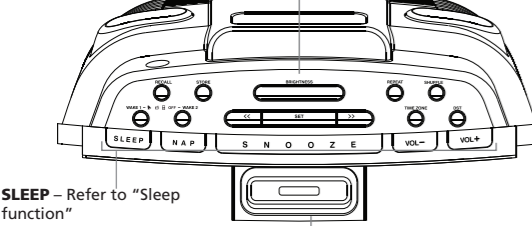
OFF – Switch to Standby mode

SLEEP – Refer to "Sleep function"

SNOOZE – Turn off the wake function momentarily; turn off the sleep function

General controls

Top view



- SLEEP** – Refer to "Sleep function"
- NAP** – Refer to "NAP function"
- SNOOZE** – Turn off the wake function momentarily; turn off the sleep function
- VOL - / VOL +** – Adjust volume

- RECALL** – Recall preset radio stations
- STORE** – Save radio stations as presets
- BRIGHTNESS** – Adjust display brightness
- REPEAT** – Select repeat playback mode for iPod/iPhone
- SHUFFLE** – Select random playback mode for iPod/iPhone
- WAKE 1** – Activate or change Wake 1 settings
- WAKE 2** – Activate or change Wake 2 settings
- << or >>** – Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period
- SET** – Enter setting mode for setting clock time, Wake 1 time or Wake 2 time
- TIME ZONE** – Time zone selection (refer to "Clock")
- DST** – Daylight saving time (refer to "Clock")

Front view



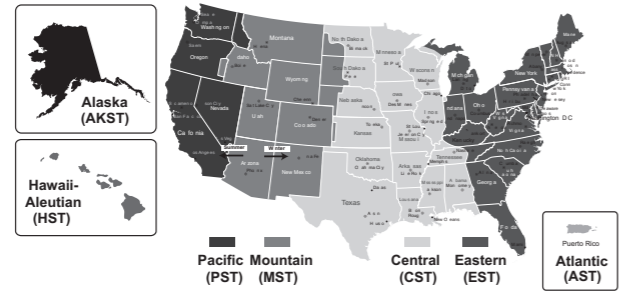 
Clock

Setting clock manually

- In case the memory holding batteries are accidentally removed, set the clock manually as below:
- Press **SET** on the top of the unit until the clock setting icon ☺ flashes on the display.
 - Press << or >> on the top of the unit to set the clock time. The time decrements or increments follow by a faster rate when you press and hold the button.
 - To save and exit the clock setting, wait for about 5 seconds or press **SET** until the clock setting icon (☺) is off and the wake setting icons (⌂ / ⏮ / ⏭ or ⌂ / ⏮ / ⏭) are either off or stop flashing.




US time zones



Canadian time zones



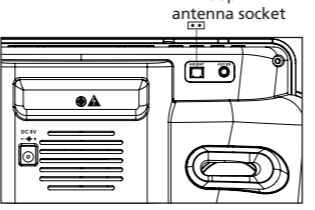Back view



- AM ANT** – Connect to the AM loop antenna
- AUX IN** – Auxiliary input jack
- DC jack** – Connect to the power adapter

Radio

Listening to the radio

- To turn on or off radio:**
- Press **RADIO** on the front of the unit to turn on the radio.
 - Press **OFF** to turn off the radio, or press **AUX** or **iPod** to select another sound mode.
- To select radio band:**
- In radio mode, press **RADIO** to select the radio band (AM/FM).
 - The selected radio band icon lights on the display.
- To tune frequency:**
- Press << or >>. The selected frequency shows on the display.
 - Press and hold to automatically search for the next available station.

Antenna

Built-in AFC
The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

AM Antenna

For AM reception, connect the AM antenna loop to the back of the radio. Stretch out the antenna cord to its fullest length and rotate the antenna for better reception.

Battery Level

Battery icon

- This clock radio can be powered by 4 AA batteries (not included). When the unit is disconnected from the AC power and operates by the 4 AA batteries, the battery icon [] will be lighted to indicate the unit is operating on battery.
- When the unit is reconnected to the AC power, the battery icon [] will not be displayed to indicate the unit is operating on AC power.
- LCD backlight and touch control keys on the front panel will be turned on for a while when the keys are pressed.
- iPod/iPhone charging is not available when operating by batteries.

Be sure to replace with new batteries with the AC power connected. Otherwise, the memory of time and alarm settings may be lost.

Low Battery Level

When the battery level of the 4 AA batteries is low, the battery icon [] will be flashing as an indication. At the same time, the text "Lo" and "batt" will be flashing alternatively for a while. The Radio, iPod and AUX mode cannot be accessed. Replace with new batteries to resume operation.

When the battery level drops even lower, the unit will be shut down.

Clock

Auto clock set

You do not have to set the clock time as a built-in automatic time set system is equipped in this clock powered by 2 AA batteries (included and installed).

- The selected time zone shows on the display briefly with **TIME ZONE** icon flashes on the display.



- Your clock is now set and ready for use.**

WARNING: Please avoid playing with these buttons after entering the Clock/Alarm set mode.

- When the N-hance App is running, the clock will be synced to the clock time on the iPhone or iPod.
- The time on your iPhone is provided by your mobile phone service. The time on your iPod is provided from iTunes during the last connection to your computer. Please note that it is possible to have up to 59 seconds time difference between your RCA clock display and your iPhone or iPod time display.

To get the clock time shown correctly:

- 1. Plug for power**
 - Plug in the AC/DC adaptor into an AC power outlet.
- 2. Select daylight saving**
 - Press and hold **DST** on the top of the unit to turn on/off in areas observing/not observing such time change.
 - A confirmation message **dST On** (on) or **dST Off** (off) shows on the display when you make a selection.
- 3. Select your time zone**
 - Press **TIME ZONE** repeatedly on the top of the unit to cycle through the time zones (EST > CST > MST > PST > AKST > HST > AST > EST...). The default time zone is Eastern (EST) (refer to the maps on the right).

iPod/iPhone

Listening to iPod/iPhone

- To connect iPod/iPhone:**
- Push the universal dock for iPod/iPhone on the front of the unit to open it.
 - Place the appropriate adapter provided with your iPod/iPhone and then place your iPod/iPhone on the universal dock for iPod/iPhone.
- To select iPod/iPhone mode:**
- Press **iPod** on the front of the unit to select the iPod mode.
 - The iPod mode icon ([]) lights on the display.
 - Playback from the iPod/iPhone starts automatically.
 - If no iPod/iPhone is connected in the iPod mode, the unit will exit the iPod mode and turn off automatically.

- Made for:
- iPhone 4 16GB, 32GB
 - iPhone 3GS 8GB, 16GB, 32GB
 - iPhone 3G 8GB, 16GB
 - iPod touch 4th generation 8GB, 32GB, 64GB
 - iPod touch 3rd generation 32GB, 64GB
 - iPod touch 2nd generation 8GB, 16GB, 32GB
 - iPod touch 1st generation 8GB, 16GB, 32GB
 - iPod nano 6th generation 8GB, 16GB
 - iPod nano 5th generation 8GB or 16GB
 - iPod nano 4th generation (video) 8GB, 16GB
 - iPod nano 3rd generation (video) 4GB, 8GB
 - iPod classic 80GB, 120GB, 160GB
 - iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB
 - iPod nano 1GB, 2GB or 4GB
 - iPod 5th generation (video) 30GB, 60GB, 80GB
 - iPod mini 4GB, 6GB
 - iPod 4th generation 20GB, 40GB
 - iPod 4th generation (color display) 20GB, 30GB, 40GB, 60GB

To control the playback:

- During playback, press **iPod** to pause the playback and press again to resume.
- Press << or >> to skip to the previous or next file.
- Press and hold << or >> to search backward or forward.
- Press **SHUFFLE** to play the files in random order in the iPod/iPhone. Press again to cancel the function (shows on the iPod/iPhone display).
- Press **REPEAT** to select a repeat playback mode (repeat 1 or repeat all). Press **REPEAT** until no repeat mode is selected (shows on the iPod/iPhone display) to cancel the repeat playback.

To charge the iPod/iPhone:

- You may charge the battery of your iPod/iPhone through the universal dock for iPod/iPhone while the unit is turned off (standby mode) or in the AUX, Radio (FM band only) or iPod mode. Charging control should be operated on the iPod/iPhone. It is not necessary to charge in iPod mode, unless you are listening to the iPod/iPhone.

iPod/iPhone charging is not available when dock is operating under battery power.

Auxiliary source

 
 

 


 
 


 

 
 
To select auxiliary mode:

1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack at the back of the unit with an audio cable (not supplied).
2. Press **AUX** to turn on the unit or to switch to listen to AUX from other modes.
- The auxiliary mode icon (**AUX**) lights on the display.
- Adjust the auxiliary player to mid-range volume and adjust the master volume on the unit. Do not turn the volume of the auxiliary player too high as this may affect the sound quality. For other playback operations, control them on your auxiliary player.

Wake function

Set wake time

 
 

 

 
This unit allows 2 wake times to be set.

1. Press **SET** on the top of the unit until a WAKE 1 icon ( or ) or a WAKE 2 icon ( or ) flashes on the display.
2. Press << or >> on the top of the unit to set the wake time. The time decrements or increments follow by a faster rate when you press and hold the button.

3. To save and exit the wake setting, wait for about 5 seconds or press **SET** until the clock setting icon () is off and the wake setting icons ( /  or  / ) are either off or stop flashing.
- To check the wake time after setting, press **SET** until a WAKE 1 icon ( / ) or WAKE 2 icon ( / ) flashes and the respective assigned wake time shows on the display.

Select the wake source

You may be woken up by the alarm, radio, or music from iPod/iPhone.

1. Set a wake time (refer to the above instructions).

2. Press **WAKE 1** or **WAKE 2** to select a wake mode. Corresponding icon lights on the front of the unit.
 – Wake 1 by alarm
 – Wake 1 by radio
 – Wake 1 by iPod/iPhone
 – Wake 2 by alarm
 – Wake 2 by radio
 – Wake 2 by iPod/iPhone

If Waking to Alarm () is selected:

- Wake to Alarm uses **GRAD-U-WAKE**, a gentle increase to the maximum alarm tone volume over 30 to 45 seconds.
- If you set the wake function with low volume level before going to bed, we advise using Waking to Alarm mode to wake you up since the volume will automatically increase.

If Waking to RADIO () is selected:

3. Select a desired wake up radio channel. If no wake up channel is set, your last listening radio station will be selected.
4. Adjust the volume to your desired level.
5. Press **OFF** to turn off the unit.

If Waking to iPod/iPhone (,) is selected:

3. Adjust the volume to your desired level. The last played file on the iPod/iPhone will be played when the wake function activates.
4. Press **OFF** to turn off the unit.

Note: If there is no iPod/iPhone connected, the alarm tone will sound instead even if Waking to iPod mode is selected.

- When the wake function activates, the corresponding wake icon will flash until the wake function is turned off. The icon will then stop flashing and keep lighting up.
- When the AC/DC adapter is disconnected, all wake mode will be reverted to alarm tone.



Turn off the wake function

 
 
To silence the wake function momentarily:

- Press **SNOOZE**. The alarm will sound again when the snooze period is over. (refer to “SmartSnooze™”).
OR

To stop the wake function:

- Press **OFF**. The alarm will be on again the following day at the same time.
OR

To disable the wake function completely:

- Press **WAKE 1** or **WAKE 2** repeatedly until no corresponding wake indicator ( or ) shows on the display.

SmartSnooze™

This operation allows extra sleep time after the wake function is on. The alarm will be off by pressing **SNOOZE, VOL +, VOL -, SLEEP** or **NAP** until the snooze period is over. Snooze function can be used repeatedly up to 1 hour. After this, the wake function will turn off until the next day.

To set the “quiet” period:

While pressing **SNOOZE**, press << or >> on the top of the unit to set the “quiet” period from 1 to 30 minutes (default: 9 minutes). Release **SNOOZE**, then the “quiet” period is set.

Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788

1-800-645-4994

For Canada Customers please ship to:
Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5



Recommendations before returning your product for a warranty claim:

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings.

Sleep function

In the sleep mode, the radio, iPod or AUX mode turns off automatically.

To set the sleep time:

1. Press **SLEEP** repeatedly to cycle among the sleep time available (90min, 60min, 30min, 15min and OFF. Off is the factory default setting. When you first set the sleep time, the sleep time is default to 90 min).
 - The icon  flashes while selecting.
2. When the desired sleep time is selected, release **SLEEP** and wait for about 5 seconds, the sleep time is now set.
 - The icon  lights on the display.

To listen to the radio:

- The radio turns on by default. If not, press **RADIO** and select a radio station as usual.

To listen to the iPod/iPhone:

- Press **iPod** and then press << or >> to select a file on the iPod/iPhone. Playback will be in repeat all files mode automatically.
- If iPod mode is selected in your last sleep mode setting, the iPod/iPhone will start to play, instead of the radio.
- The radio will be played whenever the iPod mode is selected but without an iPod/iPhone connected.

NAP function

For catnaps up to 2 hours without disturbing the regular alarm settings, the NAP function wakes you up after a short period of time.

To set the NAP time:

1. Press **NAP** repeatedly to cycle among the NAP time available (10min, 20min, 30min, 60min, 90min, 120min and OFF. OFF is the factory default setting. When you first set the NAP time, the first default value is 20min).
 - The icon **NAP** flashes while selecting.
2. When the desired NAP time is selected, release **NAP** and wait for about 5 seconds, the NAP time is now set. The current time shows and the icon **NAP** lights on the display.
 - Only alarm tone is available in the NAP mode.

To check the remaining NAP time:

- Press **NAP** once to show briefly the NAP time left.

To cancel the NAP function:

- Press and hold **NAP** or press **NAP** repeatedly to select **OFF**.

To turn off the NAP alarm:

- Press **NAP** or **OFF** to stop the NAP alarm.

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Visit <http://store.audiovox.com> to find the best accessories for your products.



© 2011 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032
Trademark(s) * Registered
Printed in China

Display brightness

Press **BRIGHTNESS** repeatedly to adjust the desired brightness level.

Warranty information

12 Month Limited Warranty Applies to RCA Clock Radios

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers,

computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or

representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings.