 


Quick Setup Guide

A built-in automatic time set system is equipped in this clock. Follow the instructions below to get the clock time to show correctly:


1. Plug for power

Plug in AC/DC adaptor into an AC power outlet.



2. Select daylight saving

If your region is currently observing Daylight Savings Time, then press and hold the **DST** button on the top of the unit. This button offers a simple way to change the clock time in the spring or fall when Daylight Savings starts or ends. A confirmation message *dST On* shows on the display when daylight saving time is active.

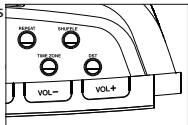

3. Select your time zone

Press **TIME ZONE** repeatedly on the top of the unit to cycle through the time zones.

Time Zone

EST	Eastern (default)
↓	
CST	Central
↓	
MST	Mountain
↓	
PST	Pacific
↓	
AKST	Alaskan
↓	
HST	Hawaii-Aleutian
↓	
AST	Atlantic

What happens when you dock your iPhone or iPod touch?

The first time you dock your iPhone or iPod touch, you'll be prompted to download the RCA N-hance App from the iTunes store. You are encouraged to download and install this app (right on your iPhone or iPod touch) in order to enjoy the wide variety of features which are available with N-hance. See the User Guide inside the app for more information.



Selecting sound source

To select the sound source, press the four touch control keys on the front panel of the unit.

Sélection de la source audio

Pour sélectionner la source audio, appuyez sur l'une des quatre touches de commandes situées sur le panneau frontal de l'appareil.


Selección de fuente de música

Para seleccionar la fuente de sonido, presione las cuatro teclas de control en la parte superior de la unidad

Front view

Vue de l'avant

Vista frontal

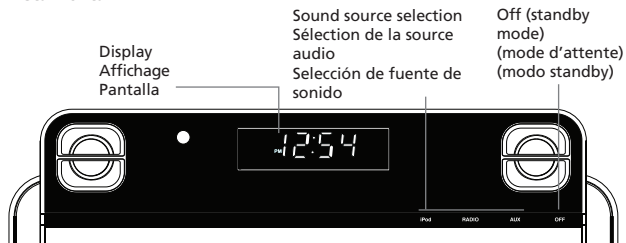

Your clock is now set and ready for use.