

RCA**user manual**
manuel de usuario
guide de l'utilisateur**Product registration**

Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products, but if you ever need service or have a question our customer service staff stands ready to help. Contact us at www.rcaaudiovideo.com. **PURCHASE REGISTRATION:** Registering Online will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act. **Register Online at: WWW.RCAAUDIOVIDEO.COM. Click on Product Registration and Fill Out the Brief Questionnaire.**

Enregistregistro del productorement du produit

Gracias por comprar un producto RCA. Nos enorgullece la calidad y fiabilidad de todos nuestros productos electrónicos, pero si alguna vez necesita servicios técnicos o si tiene alguna pregunta, nuestro personal de atención al cliente está a su disposición para ayudarle. Comuníquese con nosotros en www.rcaaudiovideo.com. **REGISTRO DE COMPRA:** El registro en línea nos permitirá comunicarnos con usted en el caso de tener que enviarle algún aviso de seguridad en virtud de la Ley Federal de Seguridad del Consumidor. **Registre el producto en línea en: WWW.RCAAUDIOVIDEO.COM. Haga clic en Registro del producto y responda al cuestionario.**

Enregistrement du produit

Merci d'avoir acheté un produit RCA. Nous sommes fiers de la qualité et de la fiabilité de tous nos produits électroniques, mais en cas de nécessité de réparation ou pour toute question le personnel de notre service clientèle est prêt à vous aider. Contactez-nous sur www.rcaaudiovideo.com. **ENREGISTREMENT D'ACHAT:** Enregistrer votre produit en ligne nous permettra de communiquer avec vous pour tout avis de sécurité au sujet du produit en vertu du Federal Consumer Safety Act (Loi fédérale de protection du consommateur). **Enregistrez votre produit en ligne sur: WWW.RCAAUDIOVIDEO.COM. Cliquez sur Enregistrement produit et remplissez le court questionnaire.**

ENE/F

It is important to read this user manual prior to using your new product for the first time.

Es importante leer este manual antes de usar por vez primera su equipo.

Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.

General controls

◀ **Clock Tuning** – Select radio frequencies; when setting clock or alarm time, press to decrease time, or press and hold to decrease time rapidly.

Clock Tuning ▶ – Select radio frequencies; when setting clock or alarm time, press to increase time, or press and hold to increase time rapidly.

Store – Store a radio station.

FM / Recall – Turn on the radio; recall stored radio stations.

Snooze/Sleep – Turn off the alarm function momentarily (9 minutes); activate sleep function.

Clock

The first time you plug in your device it will automatically be in clock setting mode. Use the **◀ Clock Tuning** or **Clock Tuning ▶** buttons to set the time.

Setting clock manually

- In clock mode, press and hold **Set Clock** until the clock flashes to enter the clock setting mode.
- Press **◀ Clock Tuning** or **Clock Tuning ▶** to set the time.
- Press and hold **◀ Clock Tuning** or **Clock Tuning ▶** to decrease or increase the time value quickly.
- The clock time is displayed in 12 hour format. The PM indicator appears to show PM time.
- Press **Set Clock** to confirm and exit clock setting mode.

Soundflow**Playback with Soundflow**

- Place your smartphone with audio playing on the top of the dock.
- Press **Soundflow On / Off** to enable Soundflow audio playback.
- The SOUNDFLOW indicator appears and the dock amplifies your audio automatically.

Soundflow

- Soundflow works with any smartphone or music player with an external speaker. No wires or cables are required.
- If you are using your phone's built in alarm or your favorite application to wake up, make sure Soundflow is on before you go to sleep.

Radio**Turning on/off the Radio**

In clock mode, press **FM / Recall** to turn on the radio. Press **Off** to turn off the radio.

Tuning the radio

Press **◀ Clock Tuning** or **Clock Tuning ▶** to adjust the radio frequency. Press and hold **◀ Clock Tuning** or **Clock Tuning ▶** for two seconds to automatically search for the next available station.

Built-in AFC

The Built In Automatic Frequency Control (AFC) helps to reduce drift on FM reception and keeps the radio locked in on the FM station to which it is tuned.

This unit is equipped with an FM antenna at the back. Uncoil the antenna to its full length for best reception. Tape the end of the antenna onto the wall if possible to improve reception.

Station presets

To store a station as preset:


- Tune to a radio station.
- Press **Store**. Preset location **PD / I** flashes on the display. Press **Vol - / Vol +** to select desired preset number, then press **Store** again to save the station to that preset.
- This unit can store up to 20 stations. Your presets are stored one by one from **PD / I** to **P20**.

To recall a preset station:

- While the radio is playing, press **FM / Recall**. The current preset station number shows on the display.
- Press **FM / Recall** repeatedly to select a desired preset station.

English IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

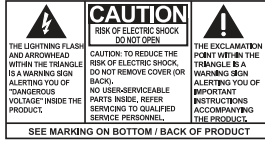

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/appliances combination to avoid injury from tip-over.



Portable Cart Warning

ADDITIONAL SAFETY INFORMATION

- The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Follow all instructions.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of the apparatus.
- To completely disconnect the power input, the AC/DC adapter of the apparatus should be disconnected from the mains.
- AC/DC adapter is a disconnect device. The AC/DC adapter should not be obstructed OR should be easily accessed during intended use.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
- No naked flame sources such as lit candles should be placed on the apparatus.
- Batteries should be properly disposed of.

Electrical power information

AC/DC Adapter:
Input: 100 ~ 240 V ~ AC 50/60 Hz
Output: 5.0 V~DC 1.2 A

Setting alarms**Setting alarm time**

- This unit allows two alarms to be set.
- Before setting the time, make sure no audio is playing through the FM radio or Soundflow by pressing the **Off** button, then press and hold **Set Al 1** to Set Alarm 1.
 - Press **◀ Clock Tuning** or **Clock Tuning ▶** to set the alarm time. Press and hold **◀ Clock Tuning** or **Clock Tuning ▶** to decrease or increase the time value quickly.
 - To confirm this alarm time, press **Set Al 1**.
 - Follow steps 1 through 3 to Set Alarm 2.

Selecting alarm source

- You may choose radio or alarm as your alarm source.
- In clock mode, press **Set Al 1** repeatedly to select desired alarm source (beep, radio, or off).
- BEEP** – Wake to beep tone.
- RADIO** – Wake to radio. (You will wake up to your most recently tuned radio station.)
- After setting Alarm 1, press **Set Al 2** repeatedly to select alarm source for Alarm 2.

Tune to a valid desired station before you select wake to Radio.

Wake to radio**To wake radio station:**

- Turn on the radio and tune to the desired station.
- Turn off the radio and press **Set Al 1** to set the alarm mode to radio, then press and hold **Set Al 1** to adjust the alarm time.
- After pressing **Set Al 1** to store the alarm time you will be prompted to set the radio alarm volume.
- Press **◀ Clock Tuning** or **Clock Tuning ▶** to select the desired volume level.
- Press **Set Al 1** to commit your selection.

The audio source must be turned off before setting alarm mode and time.

Ways to turn off alarm

- To silence the alarm function momentarily, press **Snooze/Sleep**. The **BEEP** or **RADIO** alarm mode indicator will be flashing during the snooze period. The alarm or radio will turn on again when the snooze period (9 minutes) is over.
- To turn off the alarm, press **Off**. The alarm or radio will activate again the next day.

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Before you begin**Plugging in for power**

- Connect the power adapter to a convenient wall outlet.
- Once connected to power, the clock display flashes. Refer to the Clock section for instructions on properly setting the Clock.

Battery back-up operation

- This clock is equipped with a timekeeping system that can be powered with 2 AA batteries (not included). The power failure protection circuit will not operate unless batteries are installed.
- When normal household power is interrupted, the batteries will power the clock to keep track of time and alarm settings programmed into memory.

Warranty information**12 Month Limited Warranty Applies to RCA Clock Radios**

VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to

Before you begin

- Normal operation will resume after AC power is restored so you will not have to reset the time and alarms.

 
To install the batteries:

- Remove battery compartment door (located at the bottom of the device) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.
- Insert 2 AA batteries (not included) to the battery compartment.
- Replace the compartment door.

Power failure indicator

If you have not installed 2 AA batteries (not included) in the product, or the batteries run out while power is interrupted, all the settings (clock and alarm) will be lost. After AC power is restored, the digital display will flash to indicate that power was interrupted and you should readjust the time and alarm settings.

Note: It is recommended to replace the batteries at least once per year even if no power failures have occurred.

General controls**Top view**

Vol -/Set Al 1 – Set Alarm 1 alarm source (beep/radio/off) or decrease volume; press and hold to Set Al 1 alarm time.

Vol +/Set Al 2 – Set Alarm 2 alarm source (beep/radio/off) or increase volume; press and hold to Set Al 2 alarm time.

Off/Set Clock – Press to turn off audio or alarms; press and hold to set clock time.

Soundflow On / Off – Press to switch the Soundflow audio feature on and off.

assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings.

Audiovox Return Center
Attn: Service Department.
150 Marcus Blvd.,
Hanappaug N.Y. 11788

1-800-645-4994

For Canada Customers, please ship to:
Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5