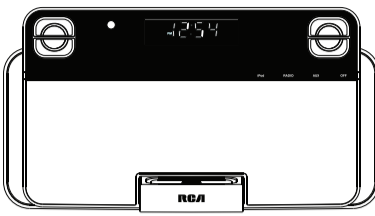 


**RCA**user manual  
guide de l'utilisateur

RC66i



EN/F

It is important to read this user manual prior to using your new product for the first time. *Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.*

iPhone is a trademark of Apple Inc.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.

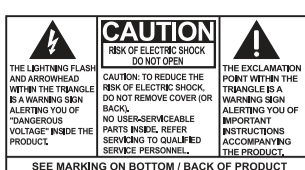 
**FCC information**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**WARNING:** TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled

of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Polarized Plug Warning

**ADDITIONAL SAFETY INFORMATION**

- In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.
- The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use.
- The AC/DC adaptor supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers that came with your product or that is listed in the user's guide.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.

- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- AC/DC adaptor is a disconnect device. Plug AC/DC adaptor only to AC power source as marked on the AC/DC adaptor
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain consumer serviceable components.
- The marking information is located at the bottom of apparatus.
- Caution marking is located at bottom of apparatus.
- The use of apparatus in moderate climates.

**Important battery precautions**

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.
- Attention should be drawn to the environmental aspects of battery disposal.

**CAUTION (For lithium battery)****Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.****Ecology**

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

**For your records**In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number:  
Model No.:  
Date of Purchase:  
Place of Purchase:  
Serial No.:**Technical information**Product: Clock Radio  
Brand: RCA  
Model: RC66i**Electrical consumption**SWITCHING ADAPTER POWER SUPPLY:  
AC INPUT: 100 - 240 V ~ 50/60 Hz  
DC OUTPUT: 8 V 1.87 A**Before you begin****Plugging in for power**

1. Connect the supplied power adapter to the unit's DC jack, and connect to a convenient wall outlet.
- This clock can also be powered by 4 "AA" batteries. Refer to "Operating with batteries" section for details.
- Refer to the "Clock" section and follow the instructions to get the clock time shown correctly with the Auto Clock set feature.

**Battery back-up operation**

This clock radio is equipped with a memory holding system that can be powered with 2 "AA" batteries (included and installed). The power failure protection circuit will not operate unless battery is installed. When normal household power is interrupted, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.

**To install or replace the batteries:**

1. Sliding the lock switch which located at the bottom of the clock radio to the right.

**2. Apply thumb pressure to the tab on battery door and then open the door.**

3. Insert or replace 2 AA batteries.

4. Close the compartment door.

5. Sliding the lock switch to the left to lock.

- It is recommended that you replace the batteries every year.
- It is recommended to plug the unit for AC power while replacing batteries to avoid the loss of clock and wake time/mode settings.

**Power failure indicator**

When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was



interrupted and you should readjust the time and alarm settings.

**Operating by batteries**

 
 
 
 
 
 
 
 
 
This clock radio can be powered by 4 "AA" batteries (not included).

**To install or replace the batteries:**

1. Apply thumb pressure to the tab on battery door which located at the bottom of the clock radio and then lift the door out and off the cabinet.
2. Insert or replace 4 AA batteries.
3. Replace the compartment door.



This unit does not have the charging function. The 4 AA batteries inserted will not be charged.

**General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume**STORE** - Save radio stations as presets**RECALL** - Recall preset radio stations**FM of F/TUNE +/-** - Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period**OFF** - Switch to Standby mode**SLEEP** - Refer to "Sleep function"**SNOOZE** - Turn off the wake function momentarily; turn off the sleep function**RC66i****General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume**STORE** - Save radio stations as presets**RECALL** - Recall preset radio stations**FM of F/TUNE +/-** - Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period**OFF** - Switch to Standby mode**SLEEP** - Refer to "Sleep function"**SNOOZE** - Turn off the wake function momentarily; turn off the sleep function**RC66i****General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume**STORE** - Save radio stations as presets**RECALL** - Recall preset radio stations**FM of F/TUNE +/-** - Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period**OFF** - Switch to Standby mode**SLEEP** - Refer to "Sleep function"**SNOOZE** - Turn off the wake function momentarily; turn off the sleep function**RC66i****General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume**STORE** - Save radio stations as presets**RECALL** - Recall preset radio stations**FM of F/TUNE +/-** - Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period**OFF** - Switch to Standby mode**SLEEP** - Refer to "Sleep function"**SNOOZE** - Turn off the wake function momentarily; turn off the sleep function**RC66i****General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume**STORE** - Save radio stations as presets**RECALL** - Recall preset radio stations**FM of F/TUNE +/-** - Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period**OFF** - Switch to Standby mode**SLEEP** - Refer to "Sleep function"**SNOOZE** - Turn off the wake function momentarily; turn off the sleep function**RC66i****General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume**STORE** - Save radio stations as presets**RECALL** - Recall preset radio stations**FM of F/TUNE +/-** - Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period**OFF** - Switch to Standby mode**SLEEP** - Refer to "Sleep function"**SNOOZE** - Turn off the wake function momentarily; turn off the sleep function**RC66i****General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume**STORE** - Save radio stations as presets**RECALL** - Recall preset radio stations**FM of F/TUNE +/-** - Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time, wake time and snooze period**OFF** - Switch to Standby mode**SLEEP** - Refer to "Sleep function"**SNOOZE** - Turn off the wake function momentarily; turn off the sleep function**RC66i****General controls****Back view****AM ANT** - Connect to the AM loop antenna**AUX IN** - Auxiliary input jack**DC jack** - Connect to the power adapter**Remote control****IPOD/iPHONE** - Select iPod mode; start or pause playback**AUX** - Select AUX mode**RADIO/BAND** - Select RADIO mode; select radio band**REPEAT** - Select repeat playback mode for iPod/iPhone**SLEEP** - Adjust display brightness**SHUFFLE** - Select random playback mode for iPod/iPhone**VOL +/-** - Adjust volume