RЕЛ

000000000

EN/F

It is important to read this user manual prior to using your new product for the first time. Nous yous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

FCC Information This equipment has been tested and

user **manual**

RC85i

Made for

Conçu pour

🖲 iPod

🖻 iPod

Works with

iPhone

onctionne ave

iPhone

guide de l'utilisateur

CAUTION

USER-SERVICEABLE TS INSIDE, REFER

Some of the following information may

not apply to your particular product; however, as with any electronic product,

precautions should be observed during

WARNING: TO PREVENT FIRE OR

THIS PRODUCT TO RAIN OR MOISTURE

Read these instructions.

Keep these instructions. Heed all warnings.

Do not use this apparatus near

Do not block any ventilation

openings. Install in accordance with

Do not install near any heat sources

stoves, or other apparatus (including

the manufacturer's instructions

such as radiators, heat registers,

amplifiers) that produce heat.

Do not defeat the safety purpose

plug. A polarized plug has two blades with one wider than the

other. A grounding type plug has

two blades and a third grounding

prong. The wide blade or the third

prong is provided for your safety. If

Modifications not expressly approved

This Class B digital apparatus

complies with Canadian ICES-003.

Cet appareil numérique de la class

different options include Alarm

Date, Snooze and Alarm sound

4. Press \blacktriangle or \blacktriangledown to change the values

and then press OK to confirm.

5. Press $^{igodoldsymbol{ heta}}$ to exit the alarm setting

automatically if no button is pressed

6. Press ALARM 1 ON/OFF or ALARM

2 ON/OFF to turn on/off the alarm.

menu or the menu will exit

Time, Alarm Volume, Alarm

and then press OK

B est conforme à la norme NMB-003

operate the equipment.

du Canada

by the party responsible for compliance could void the user's authority to

of the polarized or grounding-type

Clean only with dry cloth

Follow all instructions

ING ON BOTTOM / BACK OF PRODUCT

CK HAZARD, DO NOT EXPOSE

SEE MAR

andling and use.

water.

iPhone is a trademark of Apple Inc. iPod is a trademark of Apple Inc., registered in the U.S. and other

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards

found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

 
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving

- Increase the separation between the
- equipment and receiver.Connect the equipment into an outlet on a circuit different from
- that to which the receiver is connected. Consult the dealer or an
- experienced radio/TV technician for

General controls

Side view




USB host connector (For accessing media files from USB Flash Drive only. Do not use to connect PC.)

Back view ۲

Radio

AM loop antenna socket – Connect to the AM loop antenna DC jack - Connect to the power

 Battery compartment - To install 2 x AAA batteries



Clock Setting date and time 1. "Press **OPTION** to set the clock time" will be displayed when you first power on the unit. Press **OPTION** to enter clock setting menu. (This prompt will be disappeared and the the clock time

will be flashing to remind user if no button is pressed for a while.) 2. Press \blacktriangle or $\mathbf{\nabla}$ to highlight the time display format and date format date and time and then press OK 3. Press 🖛 or 🍉 to highlight the

option 4. Press \blacktriangle or \blacktriangledown to change the values and then press OK to confirm

5. Press OPTION to save and exit the clock settings menu or the menu will exit automatically if no button is pressed for a while.

6. Press 🕑 to toggle among three different clock display formats.

Setting Alarm or Alarm 2 setting and then press OK to confirm.

IMPORTANT SAFETY INSTRUCTIONS

۲

the provided plug does not fit into your outlet, consul an electrician for replacement of the

obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs. nvenience receptacles, and the point where they exit from the

- apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified
- by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does

not operate normally, or has been

The AC/DC adapter supplied with this product is intended tto be correctly oriented in a vertical or floor mount position.

ADDITIONAL SAFETY

INFORMATION

- Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Always leave sufficient space around the product for ventilation. Do not place product in or on a bed,
- rug, in a bookcase or cabinet that may prevent air flow through vent openings. Do not place lighted candles, cigarettes, cigars, etc. on the
- product. Connect power cord only to AC power source as marked on the
- product. Care should be taken so that objects do not fall into the product. Do not attempt to disassemble the cabinet. This product does
- not contain customer serviceable components.
- The marking information is located at the bottom of apparatus. Caution marking is located at
- bottom of apparatus.To be completely disconnect the

Before you begin

Dear RCA customers,

dropped

Thank you for puchasing the RCA Photo Clock Radio. This product includes a 7" (16:9 Aspect Ratio) TFT Liquid Crystal Display (LCD) monitor with radio, clock, music player and photo functions. Also it supports the use of SD/MMC/ MS memory cards or USB flash drives for your music and photo content. This roduct will play mp3 and Windows ledia™ audio (WMA) content.

To start using your iPod/iPhone photo clock radio, please follow the instructions in the following pages

24

Card sizes supported: MMC card: up to 4GB; SD card: up to 32GB; Memory Stick: up to 16GB

Unpacking the unit You should find the fol

the box: 7" photo clock radio AC/DC power adapter

 AM antenna loop User manual

Connect the main unit power

Connect the supplied AC/DC power adapter to the product's DC jack, and connect to a convenien

Music

- Playing music 1. Insert an SD, MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB
- connector 2. Press J and then press - or >
 - to select the source of music and press OK
- 3. Press \blacktriangle or \blacktriangledown to highlight the file you want to play
- 4. Press OK to start playback.
 - 5. To pause the playback, press OK. Press OK again to resume playback.
 - 6. Press < or 🍉 to select the previous/next file or press and hold to search backward or forward the
- Settings 1. When a music file is highlighted, press OPTION

current song.

2. A pop-up menu shows Play mode and Delete.

power input, the AC/DC adaptor of apparatus shall be discon ected

- from the mains. AC/DC adaptor is a disconnect device. The AC/DC adaptor should not be obstructed OR should be easily accessed during intended use. Battery shall not be exposed to excessive heat such as sunshine, fire
- r the like. The ventilation should not be impeded by covering the ventilation openings with items such as
- newspaper, table-cloths, curtains etc. No naked flame sources such as lighted candled should be placed on the apparatus. Attention should be drawn to the
- environmental aspects of battery lisposal • The use of apparatus in moderate
- climates

the alarm

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

is adequate. Normal operation will

When the battery backup

duration is one hour.

resume after AC power is restored so you will not have to reset the time or

functions, the alarm duration is five minutes only. When

AC power is connected, the alarm

To install or replace the batteries:

door out and off the cabinet.

2. Insert or replace 2 AAA batteries.

It is recommended that you replace

unit for AC power while replacing

batteries to avoid the loss of clock

3. Replace the compartment door.

the batteries every year.It is recommended to plug the

and wake time/mode settings

Power failure indicator

When AC power is interrupted (disconnected) for a short period of

time, both time and alarm settings

(reconnected), the Digital Display

time and alarm settings.

Viewing photo

Photo

connector

press OK.

playback

Settings

OPTION

27

will change (unless batteries are installed). After AC power is restored

will blink to indicate that power was

1. Insert an SD, MMC or MS card into the SD/MMC/MS card slot or insert

a USB flash drive into the USB

2. Press 🖳 and then press 🛹 or 🍽

to select the source of photo and

3. Press ▲, ▼, ◀ or ► to highlight the desired file.

4. Press OK to start photo slideshow

5 To pause the slideshow playback

6. Press - or > to select the

1. During slideshow playback, press

previous/next file.

2. A pop-up menu shows:

press OK. Press OK again to resume

interrupted and you should readjust the

Remove battery compartment doo

(located at the rear of the unit) by

applying thumb pressure to the tab on battery door and then lift the

2X

Plugging in for power AC OUTLET POWER SUPPLY 100-240 V ~ 50/60 Hz

Important battery precautions

Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use t for a month or more. If your product uses more than one

battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.

Discard any leaky or deformed battery immediately. They may cause skin burns or other personal njury. Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations Serial No.: Technical information Product: Digital Photo Frame for Brand: RCA Model: RC85i

Help protect the environment - we

In the event that service should be

required, you may need the model

of purchase and the serial number

number and the serial number. In the space below, record the date and place

recommend that you dispose of used

batteries by putting them into specially

Ecology

Model No.:

Date of Purchase:


Place of Purchase:

designed receptacles.

For your records

Electrical power information AC/DC Adaptor Input: 100 - 240 V~ AC 50/60 Hz Output: 6V---DC 3A

General controls

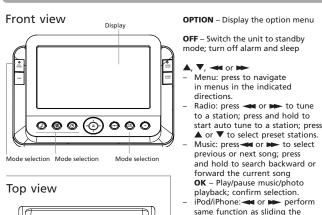

iPod/iPhone wheel SLEEP – Activate/deactivate sleep

> ALARM 1 ON/OFF /ALARM 2 ON/ OFF – Turn on/off Alarm 1/ Alarm 2

is on, turn off the wake function momentarily; turn off the sleep function. In other modes, adjust display brightness SYSTEM - Enter to System setting mode

00000000

VOL - / VOL + - Adjust volume

SNOOZE/BRIGHTNESS - When alarm

Background music – to add

Exit – to exit the pop-up menu

5. Press OK to save and exit settings.

5.

JPEG is the only supported

photo file forma

and press OK.

background music to the slideshow

Delete a file" in "Music" section)

Delete - to delete a file (Refer to

ALARM SET - Enter Alarm setting mode

Radio


- Listening to the radio 1. Press RADIO to switch on the radio or select AM or FM.
- 2. Press and hold \blacktriangleleft or \blacktriangleright to automatically tune to the next 3. Press \blacktriangle or \blacktriangledown to highlight options available station. You can also press or >>> to change the frequency by one step. Extend and adjust the pigtail 4. Press \blacktriangle or \triangledown to select from options.
 - antenna at the back of the radio for optimum reception. 3. If you wish to turn off the radio press OFF.
 - Station presets To store a station as preset: 1. Tune to a radio station.

۲

- 2. Press **OPTION** and press \blacktriangle or \blacktriangledown to select Add to Preset. Then press OK
- on the display. Press \blacktriangle or $\mathbf{\nabla}$ to elect an available one and press OK. You can save up to 20 preset stations

3. All preset locations (e.g. P01) show

To recall a preset station

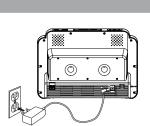

Once connected with power, "Press OPTION to set the clock time" appears after the RCA logo screen Refer to the following pages for more information on setting up date, time, alarm, listening to radio and viewing photos

Battery back-up operation This clock radio is equipped with a memory holding system that can be powered with 2 "AAA" batteries (not

included). The power failure protection

circuit will not operate unless battery is installed. When normal household

power is interrupted, or AC/DC power

time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function

of alarm still occurs during the power

Windows Media is trademarks of

Microsoft Corporation in the United States and other countries.

5 Press **OK** to save and exit settings

The setting menu will also exit

1. When a music file is highlighted, press **OPTION**.

2. A pop-up menu shows Play mode

3. Press ▲ or ▼ to highlight Delete

The total number of files

The unit can only support USB

flash drive and memory card which formatted in file system

The supported music file formats include mp3, WMA & WAV.

or folders supported is

for a while

Delete a file

and Delete.

and press OK.

press **OK** to confirm

6000 (maximum).

of FAT or FAT32.

automatically if no button is pressed

interruption if remaining battery power

adapter is unplugged, the batteries will power the clock radio to keep track of

3. Press ▲ or ▼ to highlight the

Listening to iPod/iPhone

To connect iPod/iPhone: 1. Press PUSH on the right side of the

the unit to select the iPod mode.

iPhone starts automatically.

video automatically.

Start playback of photo or video

files on your iPod/iPhone manually

first. The iPod/iPhone cannot play

If no iPod/iPhone is connected in

"No iPod/iPhone connected!"

the iPod mode, the unit will show

Press - or > to select Music or

Photo/Video and then press OK. Playback of music file from the iPod/

iPod/iPhone

3. Press \blacktriangle or \blacktriangledown to select a preset station and press **OK** to c

Radio step frequency

change In FM/AM radio mode, press OPTION and ▲ or ▼ to access "FM step" or "AM step" items (depends on what the current radio band is). Select the desired step frequency and press OK for confirmation

- The default FM step 24 frequency is 200kHz and AM step frequency is 10kHz
- All radio preset stations will be reset when the step frequency is confirmed to change.

Antenna **Built-in AFC**

The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

AM Antenna

For AM reception, connect the AM antenna loop to the back of the radio. Stretch out the antenna cord to its fullest length and rotate the antenna for better reception.

Display brightness

Press SNOOZE/BRIGHTNESS to select the brightness level among High, Middle and Low.

1. Press SYSTEM to show system

System settings

2. Press \blacktriangle or \bigtriangledown to highlight the option and then press OK.

- 3. In **Language** sub-menu, press ▲ or ▼ to change the values and then press **OK** to confirm. • In Reset all setting sub-menu, press OK. Then press 🛹 or 🍽 to select Yes and press OK to confirm
- 4. Press 🕑 or SYSTEM to exit the system menu

All user defined settings (e.g. radio presets, clock time format and date format) will be lost after reset

3. Press \blacktriangle or \blacktriangledown to highlight **Play** mode and press OK.

To control the playback:

resume

24

4. Press ▲ or ▼ to select among Normal, Repeat one, Repeat all and Shuffle

. During playback, press **OK** to pause the playback and press again to

previous or next music file. Press

backward or forward for a music

3 Use the controls on iPod/iPhone for

You may charge the battery of your

iPod/iPhone through the universal

is turned off (standby mode) or

or iPod/iPhone mode. Charging

cards, speakers, accessories, computers

computer peripherals, other media

This Warranty does not apply to any product or part thereof which, in the

opinion of the Company, has suffered or been damaged through alteration,

improper installation, mishandling,

players, home networks or vehicle

ctrical systems.

in the Music, Photo, Clock, Radio

control should be operated on the

Pod/iPhone. It is not necessary to

charge in iPod mode, unless you are

dock for iPod/iPhone while the unit

photo and video files playback

To charge the iPod/iPhone:

listening to the iPod

and hold < or 📂 to search

2. Press 🛹 or 🍽 to skip to the

 Slideshow interval – to set the • Display mode - to select display mode

• Rotate - to rotate the photo

- Wallpaper to select wallpape Slideshow Transition – to select
- different ways of transition

Sleep function

Sleep timer The unit has a built-in sleep timer which ables the unit to automatically turn off after a set period of time

Press **SLEEP** repeatedly until the sleep time (Off, 15, 30, 60, 90 Mins) you desire displays

1 Press SI FEP to activate the sleep timer function and the sleep icon will be turned on.

2. When the sleep timer function is activated, press $\ensuremath{\textbf{SLEEP}}$ to show the remainig sleep time

3. Press SLEEP again will show a popup menu. To change sleep time (90 60, 30, 15 mins and off), press A or to highlight different sleep time and press OK.

You can also change the sleep setting from the clock setting menu. 1. Press **OPTION** to enter clock setting menu. This menu can be recalled under in clock display mode screen.

2. Press \blacktriangle or $\mathbf{\nabla}$ to highlight Sleep Time and then press **OK**

3. Press \blacktriangle or \blacktriangledown to select the sleep time and then press OK to confirm The default sleep time is 90 mins.

4. Press ▲ or ▼ to highlight Sleep Mode and then press **OK**

ANY OTHER WARRANTY. No person or

representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

How to make a warranty claim:

 If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any persona content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY

PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product

5. Press \blacktriangle or \blacktriangledown to select the sleep mode from radio music (USB or nemory card) and iPod/iPhone. The default sleep mode is radio.

6. To turn off the sleep timer, press of OFF or SNOOZE. It can also be turned off by pressing **SLEEP** twice, then select Off in the pop-up menu.

The display will automatically む人 dimmed so that it will not disturb you while you are

 In radio mode, press OPTION and then press ▲ or ▼ to select Load Preset. Then press OK. 2. All preset locations show on the display.

Wallpaper

select Wallpaper.

or **V** and then **OK**.

3. Press OK

Setting wallpaper Follow the below two options to set the wallpaper Option 1 1. Press O to enter Clock mode if you are in other modes 2. Press OPTION to enter clock setting

menu and then press \blacktriangle or \blacktriangledown to

4. Select below options by pressing **A**

Default: To use the built-in

device or memory card

option and use a black

background instead

5. If you select External, press 🛹

or **>** to select the source of wallpaper and then press **OK**.

External: To select a desired

photo as wallpaper from USB

Off. To turn off the wallnape

photo as wallpaper

If the "Slideshow" item in the 2 clock setting menu is set to "ON" and "Wallpaper" item is set to "Default" or "Off", the builtin photos will be used for slideshow in clock display mode. Otherwise, the photos in the memory card or USB flash drive will be used for slideshow in clock display mode.

Option 2: 1. Press ☺ and then press ◀ or ► to select the source of photo and press OK.

- 2. Press \blacktriangle , \bigtriangledown , \checkmark , \checkmark or \blacktriangleright to select the desired photo from the thumbnails
 - 3. Press OPTION to enter photo setting menu and then press lacksquare or lacksquare select Wallpaper.

4. Press ▲ or ▼ to select ON and press OK

6. Press ▲, ▼, ◀ or ► to select desired wallpaper.

covered by the warranty.

What we will do:

warranty period.

Audiovox Return Centre

c/o Genco 6685 Kennedy Road,

Mississuaga, Ontario L5T 3A5

Unit#3, Door 16,

A new or refurbished unit will be

shipped to you freight prepaid

Provide you with a new, or at our

exchange unit is under warranty for

the remainder of the original product's

For Canada Customers, please ship

option, a refurbished unit. The

7. Press OK to confirm

publication are for representation only and subject to change

Illustrations contained within this

The descriptions and characteristics given in this document are given as a general indication and not as a uarantee. In order to provide the highest quality product possible, we reserve the right to make any mprovement or modification without prior notice.

For Customer Service Visit Our Website At www.rcaaudiovideo.com Product Information, F FAQ's, User Manual

Audiovox Electronics Corp. 150 Marcus Blvd., Hauppauge, NY 11788 ©2010 Audiovox Electronics Corp. Trademark(s) ® Registered Marque(s) ® Deposée(s) Printed in China Imprimé en Chine

misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF

MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY, ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR

- even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to

Audiovox Electronics Corp. Attn: Service Departn 150 Marcus Blvd. Hauppauge N.Y. 11788 1-877-833-3491

will be returned with factory

default settings, and without any

pre-loaded content which may have been installed in the originally

purchased products. Consumer will

be responsible for reloading data and content. Consumer will be

responsible to restore any persona

any remotes, memory cards, cables, etc. which were originally provided

with the product. However DO NOT return any removable batteries

Properly pack your unit. Include

preference settings.

Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.

Pay any charges billed to you by the Exchange Center for service not

unit to open the universal dock for iPhone 3G 8GB, 16GB Made for 2. Place the appropriate adapter iPod touch 2nd generation 8GB. 16GB, 32GB, 64GB provided with your iPod/iPhone and iPod touch 1st generation 8GB, then place your iPod/iPhone on the 16GB, 32GB universal dock for iPod/iPhone. iPod nano 5th generation 8GB

or 16GB

Works with:

iPhone 3GS 16GB, 32GB

iPod nano 4th generation (video) 8GB, 16GB

iPod nano 3rd generation (video) 4GB, 8GB

iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB

iPod nano 1GB, 2GB or 4GE

iPod 5th generation (video)

iPod 4th generation 20GB. 40GB

iPod 4th generation (color display) 20GB, 30GB, 40GB, 60GB

Warranty information

12 Month Limited Warranty Applies to Acoustic Research Audio/

AUDIOVOX ELECTRONICS CORP. (the

Company) warrants to the original retail purchaser of this product that should

this product or any part thereof, under

normal use and conditions, be proven

within 12 months from the date of original purchase, such defect(s) will be

repaired or replaced with reconditioned

product (at the Company's option)

To obtain repair or replacement

at the address shown below

without charge for parts and repair

within the terms of this Warranty, the

product is to be delivered with proof

of warranty coverage (e.g. dated bill of sale), specification of defect(s),

This Warranty does not extend to the

antenna problems, loss/interruptions of

incurred for installation, removal or reinstallation of product, to corruptions

caused by computer viruses, spyware or

other malware, to loss of media, files,

discs, removable memory devices o

data or content, or to damage to tapes,

broadcast or internet service, to costs

elimination of externally generated

static or noise, to correction of

transportation prepaid, to the Company

defective in material or workmanship

Limited warranty

Video Products

labor

30GB 60GB 80GB

iPod mini 4GB, 6GB

iPod classic 80GB, 120GB, 160GB

To select iPod mode: Press iPod/iPhone on the front of

iPod/iPhone