

Battery Installation

Your RCR504BR universal remote requires 2 new AAA alkaline batteries (sold separately).

To install the batteries:

1. Turn the unit over, and remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.

Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

Programming with Direct Entry

To program your remote to control up to four components, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Find the four-digit code for your brand of TV, VCR, DVD, satellite receiver, cable box, or digital TV converter in the enclosed code lists.
3. Press and hold the **CODE SEARCH** key until the indicator light turns on.
4. Release the **CODE SEARCH** key.
5. Press and release the **TV, VCR or SAT•CBL•DTC** key. The indicator light blinks and then remains lit.

Note: DTC references digital TV converter.


To program the **DVD-AUX** key: Press the **DVD-AUX** key. The indicator light continues to blink until you select the component you want the **DVD-AUX** key to control. To control a DVD, press the **VCR** key. To control a TV, press the **TV** key. To control a satellite receiver, cable box, or digital TV converter, press the **SAT•CBL•DTC** key. The indicator light stops blinking and remains lit.

6. Enter the four-digit code, using the numeric keypad. After the code is entered, the indicator light turns off.

Note: If the indicator light blinks multiple times, you've entered an invalid code. Start from step 2 again.

7. Aim the remote at the component and press the **ON-OFF** key. The component should turn off.


Note: If your component does not respond, try all the codes for your brands. If the codes do not work or your brand is not listed, try the Code Search Method that follows.

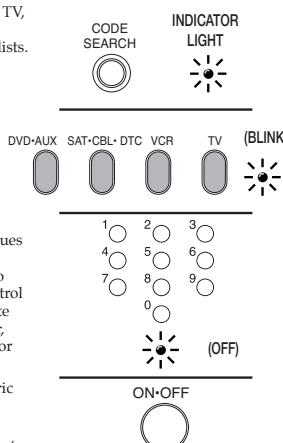

Programming With Code Search

If your TV, VCR, DVD, satellite receiver, cable box, or digital TV converter does not respond after you have tried all the codes for your brands, or if your brand is not listed, try searching for your code via the Code Search Entry Method. To program your remote via the Code Search Entry Method, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light turns on.
3. Release the **CODE SEARCH** key.
4. Press and release the component key you wish the remote to control—**TV, VCR** or **SAT•CBL•DTC** key. The indicator light blinks once and remains lit.
Important: Find the **ENTER** key on your remote (don't press it yet). You will need to press this key quickly in step 6 below.
5. Press and release the **DVD-AUX** key: Press the **DVD-AUX** key, followed by the component key you wish the **DVD-AUX** key to control. For DVD, press the **DVD-AUX** key, followed by the **VCR** key. For an auxiliary component, press the **DVD-AUX** key, followed by the corresponding component key (**TV, VCR, SAT•CBL•DTC**).
6. Press and release the **ON-OFF** key until the component turns off.
Important: You may have to press the **ON-OFF** key up to 200 times.
7. As soon as the component turns off, press the **ENTER** key within 4 seconds. The indicator light turns off.
Note: If you wait longer than 4 seconds to press **ENTER**, the remote goes to the next code—you will need to start the code search from step 1 again.

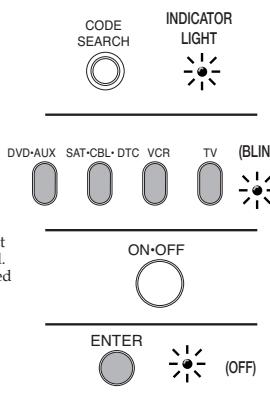

Menu Function – TV, VCR, DVD, SAT•CBL•DTC

The Menu function on your remote is used to make changes on selected settings. The **MENU** key operates in TV, VCR, DVD and SAT•CBL•DTC Modes. Each menu varies from brand to brand.

The TV Menu is used to make changes in the TV settings, such as changing color, channels and timers. The SAT•CBL•DTC Menu navigates through the Menu screens to make changes to settings. The VCR or DVD Menu you can navigate to languages, subtitles and more.


While in Menu Mode, these keys function as follows:

Mode	Vol up / down	Ch +/-
TV, SAT•CBL•DTC, VCR, DVD	Cursor moves right/left	Cursor moves up/down

To use the Menu function, follow these steps:

1. Press the component button whose menu you wish to access (**TV, VCR, DVD-AUX** or **SAT•CBL•DTC**).
2. Press the **MENU** key. The menu of the chosen component is shown.

Note: Some functions of some brands may not be fully supported.

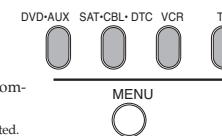

3. To exit the menu mode press the corresponding component key on the remote (**TV, VCR, DVD-AUX** or **SAT•CBL•DTC**).

Special Notes for Menu Use

1. In the Menu Mode of RCA, GE and PROSCAN TVs, pressing the **MENU** key selects the highlighted item. The numeric keys may also be used to select the menu choice.
2. For SONY components, pressing the **ENTER** key while in Menu Mode returns to the previous menu.



Accessing Digital Channels

The INPUT and — (dash) key lets you enter a digital sub-channel number, like 59.1, directly. Use the number keys to enter the main channel number (in this case, "59"). Then press the INPUT (—) key and press the subchannel number (in this case, "1"). The INPUT key has two other functions as well: (1) it toggles through all the video sources connected to your TV; and (2) when the remote is in VCR mode, this button toggles between VCR and the TV input.

Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal components can cause malfunction and invalidate its warranty.

90 Day Limited Warranty

Audiovox Electronics Corporation warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it to the address below for a replacement with a current equivalent. This replacement is the company's sole obligation under this warranty. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE IS DISCLAIMED. This warranty excludes defects or damage due to misuse, abuse, or neglect. Incidental or consequential damages are disclaimed where permitted by law. This warranty does not cover product purchased, serviced or used outside the United States or Canada.

U.S.A.: Audiovox Electronics Corporation, 150 Marcus Blvd., Hauppauge, New York 11788
CANADA: Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Door 16, Mississauga, Ontario L5T 3A5