

Quick Start Guide


Thank you for purchasing the RCA Digital Voice Recorder (RP5130). In this Quick Start Guide, you will learn how to set up the date and time for your player and access the folders/player menu.

Date and time setup

1. Insert 2 AAA batteries in the player.
2. When *YEAR* shows, press **◀/▶** or **VOLUME +/-** to adjust the value (default year: 2008) and then press **MENU** to confirm.
3. Repeat step 2 to set the "Month", "Date", "12/24 hour time", "Hour" and "Minute"
4. After the date and time are set, press **▶ PLAY** to turn on the player and start using.

Accessing folders/player menu

Accessing folders

Press **MENU** repeatedly to select folders (1-6 and .

Accessing player menu

1. Press and hold **MENU** for about 2 seconds and then release the button. The first menu item, *DICT* or *CONF* flashes on display.
2. Then press **MENU** repeatedly to select another menu items. Refer to the user manual for more information.



For details on operating the player, please refer to the user manual.

