
user manual manual de usuario

# RP5500i RP5502i




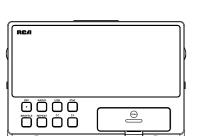

## FN/F


# General controls

## Front view

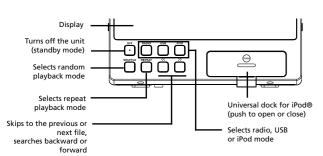

Top view

Press **SET** at the center to select adjusting the clock time, wake time 1 or wake time 2. Rotate the knob to adjust the clock time, wake time 1 or wake time 2.

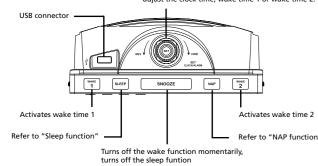

iPod

# Listening to iPod

- Listening to iPod

  1. Push the universal dock for iPod on the front of the unit to open it.

  2. Eight adapters are supplied. Check the table on the right and use the appropriate adapter for your iPod.

  3. Place the adapter and then your iPod on the universal dock for iPod.

  4. Press iPod on the front of the unit to select the iPod mode.

  5. Playback from the iPod starts.

- select the IPOd mode.


  5. Playback from the IPod starts
  automatically. Press IPod to pause the
  playback and press again to resume.

  6. Press (\*) >> to skip to the previous or
  next file. Press and hold (\*/ )> to
- search backward or forward.

  7. Press **SHUFFLE** to play the files in random order in the iPod. Random playback indication shows on the iPowhen the function is activated. Press
- when the function is activated. Press again to cancel the function.

  8. Press REPEAT to select a repeat playback mode (repeat 1 or repeat all). Repeat playback indication shows on the iPod when the function is activated. Press REPEAT until no repeat all the iDod when the function is activated. playback indication shows on the iPod to cancel the repeat playback.

- You may charge the battery of your iPod through the universal dock for iPod while the unit is turned off (standby mode) or in the iPod mode. Charging control should be operated on the iPod. If no iPod is connected in the iPod mode the unit will exit the iPod mode.
- de, the unit will exit the iPod mode and turn off automatically

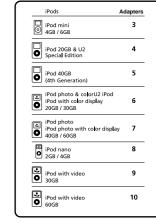

\* For the latest iPod models, please use the adapter provided with your iPod.

Made for: iPod with video (30GR 60GR 80GR) 5th generation
iPod photo (20GB U2 Special Edition, 30GB U2 Special Edition, 40GB, 60GB) 4th

**generation** iPod (20GB, 20GB U2 Special Edition, 40GB) 4th generation iPod nano (2GB, 4GB) 1st generation iPod mini (4GB, 6GB) 1st & 2nd

## FCC information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
In accordance with FCC requirements,

changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product. This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

reception.

If this equipment does cause interference to If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

• Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).

• Move the unit away from the equipment that is receiving interference.

- Plug the unit into a different wall outlet so that the unit and the

outiet so that the unit and the equipment receiving interference are on different branch circuits. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federa Communications Commission has prepared Communications Commission has prepar a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems. This booklet is available from the U.S. Government Printing Office, Washingtor DC 20402. Please specify stock number 0 000-00345-4 when ordering copies.

General controls

Selects the radio

Time zone selector (refer to "Clock")

 $\bigcirc$ 

wer jack for AC/DC adapter (10V --- 1.4A)

Side views

Bottom view

106 2046

 $\nabla$ 

Wake function

This unit allows 2 wake times to be set.

Press **SET** on the top of the unit until the icon WAKE1 or WAKE2 flashes on the display.

Rotate the knob on the top of the unit

to set the wake time. The time decrements or increments follows by a faster rate when you rotate and hold the knob.

To save and exit the wake time setting wait for about 5 seconds or press SET until all clock setting ⊙, WAKE 1 and WAKE 2 icons are off. The wake 1 or wake 2 time is now set. To check the wake time after setting, press SET until the icon WAKE1 or WAKE2 flashes and the respective assigned wake time shows on the display.

Select the wake source

You may be woken up by the alarm, radio, music from iPod or USB flash player.

1. Set a wake time (refer to the above instruction)

2. Press WAKE 1 or WAKE 2 to select a

wake mode. Corresponding icon lights on the front of the unit.

1 - Wake time 1 by alarm

1 - Wake time 1 by radio

save and exit the wake time setting

Set the wake time

For your records
In the event that service should be required you may need the model number and the erial number. In the space below, record the date and place of purchase and the

Place of Purchase: Serial No.:

## Service information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this user manual.

The AC/DC Adaptor supplied with thi product is intended to be correctly orientated in a vertical or floor mount



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

mérique de la class B est ne à la norme de NMB-003 du

# PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE IMPORTANT SAFETY INSTRUCTIONS

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions show be observed during handling and use.

Read these instructions.

- Read these instructions.
  Keep these instructions.
  Heed all warnings.
  Follow all instructions.
  Do not use this apparatus near water.
  Clean only with dry cloth.
  Do not block any ventilation openings.
  Install in accordance with the
  manufacturer's instructions.
  Do not install near any heat sources such as
  radiators, heat registers, stoves, or other
  apparatus (including amplifiers) that
  produce heat.
  - apparatus (including amplifiers) that produce heat. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong i provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  - an electrician for replacement or une obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when

  - bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of
  - time.
    Refer all servicing to qualified service
    personnel. Servicing is required when the
    apparatus has been damaged in any way,
    such as power-supply cord or plug is

You do not have to set the clock time as a built-in automatic time set system is equipped in this clock powered by 3V (2 AA batteries, included and installed). All you

have to do is to plug this clock for power

automatically after setting the time zone

and daylight saving time (read below). However, the batteries can also be

exhausted and we recommend that you

Slide the time zone selector at the bottom of the unit to Eastern, Central, Mountain or Pacific time zone (refer to the maps on the

Press and hold the Daylight Saving Time button at the bottom of the unit to turn on/ off in areas observing/ not observing such time change. The icon 🗘 shows on the display when daylight saving time is active.

replace the batteries every 2-3 years.

and current time will be shown

Setting time zone

Daylight saving time

Clock

Auto clock set

damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been

# Portable Cart

- ADDITIONAL SAFETY INFORMATION Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

  Always leave sufficient space around the
- product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings. Do not place lighted candles, cigarettes, cigars, etc. on the product. Connect power cord only to AC power source as marked on the product. Care should be taken so that objects do not fall into the product.

- Do not attempt to disassemble the cabinet.
  This product does not contain customer
- serviceable components.

  IF YOUR PRODUCT OPERATES ON
  BATTERIES, adhere to the following
- precautions:

  A. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.

not replaced at the same time.

B. Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.

C. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial and local regulations.

In case the memory holding batteries are accidentally removed, set the clock manually as below:

Press **SET** on the top of the unit until the clock setting icon ⊕ flashes on the

the Clock Setting Root Communication and Commun

To save and exit the clock setting, wait for about 5 seconds or press **SET** until the clock setting  $\odot$ , WAKE 1 or WAKE 2 icon is off. The clock time is now set.

Settina clock

# Important information

# Safety precautions

Make sure that you keep away from water and high

- temperatures.

  Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- cause the system to malfunction.
  Keep your unit away from humid areas
  and abnormally hot places.
  To prevent personal injury, do not
  reverse any batteries.
  The use of apparatus in moderate
- The apparatus should not be exposed
- to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus. No naked flame sources, such as lighted candles, should be placed on the
- apparatus.
   Attention should be drawn to the environmental aspects of battery
- disposal.
- disposal. Minimum distances (2cm) should be kept around the apparatus for sufficient ventilations. The ventilation should not be impeded by covering the ventilation opening with items, such as newspaper, table-
- cloths, curtains, etc.
  The rating plate is located at the bottom cabinet of apparatus.

## Maintenance

Clock

US time zones

Canadian time zones

Clean the unit with a soft cloth, or a damp chamois leather. Never use solvents.

Mountain

# Technical information

Product: Clock Radio Brand: RCA Model: RP5500i, RP5502i

Electrical consumption External AC adaptor: 10V === 1.4A Power consumption: 120VAC x 0.7A

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other

# **Getting started**

Plugging in for power Insert the connector of the AC/DC adpate to the power jack at the bottom of the

# unit. External AC/DC adaptor input power supply: 100-240V ~ 50/60Hz

Power is fed to the unit even when it is not functioning. To cut the power supply off, the power cable must be unplugged.

# Battery back-up operation

This clock radio is equipped with a memory holding system that can be powered with a "AA" batteries (included). The power "AA" batteries (included). The power failure protection circuit will not operate unless battery is installed. When normal household power is interrupted, or AC line cord is unplugged, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm. will not have to reset the time or the alarn

Install battery as follow:

1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.

2. Insert 2 AA batteries (included).

3. Replace the compartment door.

Note: we recommend that you replace the batteries every 2-3 years

When external DC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed). After external DC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

Power failure indicator

IMPORTADOL Comercializadora Thomson de Mo

rcializadora Thomson de México, S.A. de C.V. Álvaro Obregón No. 151. Piso 13. Col. Roma. Delegación Cuaultémoc C.P. 06700. México, D.F. Telefono: 52-55-11-020360 RFC: CTM-980723-KS5

EXPORTER Thomson Inc. P.O. Box 1976 Indianapolis, IN 46206 - 1976 ©2007 Thomson In ©2007 I nomson Inc.
Trademark(s) ® Registered
Marque(s) ® Deposée(s)
Marca(s) ® Registrada(s)

# Radio & USB

# Listening to the radio

- Press RADIO on the front of the unit to turn on the radio.
   Slide BAND to select the radio band. The selected radio band shows on the
- 3. Rotate **TUNING** to select frequency. The
- 4. Press **OFF** to turn off the radio.

## **Built-in AFC**

The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

When tuning in FM stations, you may notice that the station you are tuning can be well-tuned on two or three nearby points on the dial. Always tune carefully

need for an outside antenna for AM reception. Rotating the unit slightly may improve reception of distant AM stations.

- Connect an external USB flash player (with mp3 music) to the USB connector

- Never connect the unit to a computer Doing so may cause damage to the unit and the computer.

# exchange, which includes parts and labor 91 days to 1 year from date of purchase unit exchange, which includes parts only;

# 91 days to 1 year from date of purchase unit exchange, which includes parts only; you pay the labor. What we will do: • Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period. • Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required. How to make a warranty claim: • Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials. • Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to: Thomson Inc., Product Exchange Center, 11721 B Alameda Avenue, Socorro, Texas 79927 • Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson. Pay any charges billed to you by the Exchange Center for service not covered by the warranty. • A new or refurbished unit will be shipped to you freight prepaid. What your warranty does not cover: Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For

- customer instruction. (Your Owners Manu provides information regarding operating Instructions and user controls. For additional information, ask your dealer.) Installation and set-up service

- nistaliation and set-up service adjustments.

  Batteries.

  Damage from misuse or neglect.

  Products which have been modified or incorporated into other products.

  Products purchased or serviced outside the USA.

4. Press << />
/>> to skip to the previous or next file. Press and hold « / » to search backward or forward.

Press SHUFFLE to play the files in the flash player in random order. The icon shows on the display when shuffle

Vote:

• You may charge the battery of your USB flash player through the USB jack (5V 500mA) while the unit is in the USB mode. Charging control should be operated on the USB flash player.

• The unit supports Microsoft FAT12, 16 & 32 and ISO9660 file systems only. Other file systems from Linux, MAC or NTF5 are not supported.

• Only mpeg 1/2 layer 3 format is supported for mp3 files.

• Digital Right Management (DRM) type music files will not be played.

• Only the first 999 mp3 files can be read.

displays them as tracks only.

Only USB flash player is supported.
Other USB devices such as MTP USB flash player, USB hub or USB card

shows on the dis repeat playback.

de is active. Press again to cance

Printed in China / Impreso en China

at the loudest and clearest point

## AM Antenna

A built-in ferrite rod antenna eliminates the

# Listening to the external USB flash player

- (with mp3 music) to the USB connector at the top of the unit.

  2. Press USB on the front of the unit to select the USB mode.

  3. Playback from the USB flash player starts automatically. Press USB to pause the playback (the TRACK icon flashes during pause) and press again to resume.

For how long after your purchase:

90 days from date of purchase - u

## U.S. Limited Warranty Acts of nature, such as but not limited to

- Acts of nature, such as but not limited to lightning damage.

  Product Registration:
  Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

  Limitation of Warranty:
  THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC, ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
  REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC, SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF THE STATE OF INDIANA. EXCEPT TO THE PROHIBITED OT HE APPLICABLE WARRANTY.

  \*\*Some states do not allow the exclusion nor limitation of incidential or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

you.
This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

. Say from state to state.

If you purchased your product outside the USA: This warranty does not apply. Contact your

# WARNING: Avoid playing with these buttons when setting clock or wake time

Press BRIGHTNESS to dim the display and press again to restore to the original brightness level. When the display is

# Display brightness

med, the blue indicator on the universa dock for iPod will also be turned off.

- Wake function Vaking to USB (•⇐)

- Waking to RADIO (□) Naking to RADIO ( )

  S. Select a desired wake up radio channel (refer to "Listening to the radio"). If no wake up channel is set, your last listening radio station will be selected.

  Adjust the volume to your desired
- Press **OFF** to turn off the unit.
- 4. Press **OFF** to turn off the unit.

Battery compartment (refer to "Battery back-up operation")

Daylight saving time button (refer to "Clock")

- The unit equips with GRAD-U-WAKE feature, the alarm tone volume will increase gradually to its maximum in about 30 to 45 seconds. If you set the wake function with low volume level before going to bed, we advise using Waking to Alarm mode to wake you up since the volume will automatically increase. When the AC power is disconnected, all wake mode will be reverted to alarm tone.

- me to your desired

- Waking to iPod (♥) level. The last played file on the iPod will be played when the wake function
- Note: If there is no iPod connected, the alarm tone will sound instead even if Waking to iPod mode is selected.

- Adjust the volume to your desired level. The first file on the USB flash player will be played when the wake function activates.
- **Note:** If there is no USB flash player connected, the alarm tone will sound instead even if Waking to USB mode is ote: When the wake function activates, ne corresponding wake icon will flash ntil the wake function is turned off. The on will then stop flashing and keep ghting up.

SmartSnooze<sup>™</sup> This operation allows extra sleep time after the wake function is on. The alarm will be off by pressing **SNOOZE**, **SLEEP** or **NAP** until the snooze period is over. Snooze function can be used repeatedly up to 2 hours. After this, the wake function will turn off until the next day.

Set the "quiet" period as follow: While pressing **SNOOZE**, rotate the knob on the top of the unit to set the "quiet" period from 1 to 30 minutes (default: 9 minutes). Release **SNOOZE**, then the "quiet" period is set.

## <u>OR</u>

Stop the wake function: Press **OFF**. The alarm will be on again the following day at the same time.

Turn off the wake function

Silence the wake function momentari Press **SNOOZE**. The alarm will sound again when the snooze period is over (refer to "SmartSnooze™").

# Press WAKE 1 or WAKE 2 repeatedly until no corresponding wake indicator (e.g. ▶ ☐ 🖁 🗠 ) shows on the

# **NAP** function

Sleep function

In the sleep mode, the radio, iPod or USB

flash player (if connected) turns off automatically. To set the sleep time, simply:

Press SLEEP repeatedly to cycle among the sleep time available (90min, 60min, 30min, 15min and OFF. 90min is the default setting).
 If necessary, press «/ /» to further set the sleep time. Each press of the button will decrease or increase one minute. For example, to set 35 min.

minute. For example, to set 35 min, press **SLEEP** to select 30min and then

elected, release **SLEEP** and wait for

press >> 5 times.

• The icon flashes while selecting.

2. When the desired sleep time is

For catnaps up to 2 hours without disturbing the regular alarm settings, the NAP function wakes you up after a short period of time. Simply:

- 1. Press NAP repeatedly to cycle among the NAP time available (10min, 20min the NAP time available (10min, 20min, 30min, 60min, 90min, 120min and OFF. 20min is the default setting). If necessary, press «//» to further set the NAP time. Each press of the button will decrease or increase one minute.
- For example, to set 35min, press NAP to select 30 min and then press >> 5 The icon NAP flashes while selecting

Eastern

If the iPod or USB mode is selected in

your last sleep function setting, the iPod or USB flash player will start to play, instead of the radio. The radio

will be played whenever the iPod or USB mode is selected but without the corresponding device connected. Select a radio station as usual, <u>OR</u> Press iPod or USB and then press «/

Press iPod or USB and then press «/ » to select a file on the iPod or USB flash player. Playback will be in repeat all files mode automatically. Press SLEEP once to check the remaining sleep time. Press SLEEP repeatedly to select another sleep time. If you decide to turn off the unit sooner, press SNOOZE, OFF or press SLEEP repeatedly to select "OFF". When the sleep mode is activated again, the sleep time will be the same as the one you have set before.

Central

When the desired NAP time is selected release NAP and wait for about 5 seconds, the NAP time is now set. The current time shows and the icon NAP lights on the display.
 Press NAP once to show briefly the NAP time left.

2. When the desired NAP time is selected

 Only alarm tone can be selected in the NAP mode. NAP mode.

• Press **OFF** to stop the NAP alarm, <u>OR</u> press and hold **NAP** until "OFF" is selected to cancel the NAP function.

