



user manual guide de l'utilisateur manual de usuario

Product registration

Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products but if you ever need service or have a question, our customer service staff stands ready to help. Contact us at www.rcaaudiovideo.com.

PURCHASE REGISTRATION: Registering On-line will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act. **Register Online at:**

WWW.RCAAUDIOVIDEO.COM. Click on Product Registration and Fill Out the Brief Questionnaire.

Enregistrement du produit

Merci d'avoir acheté un produit RCA. Nous sommes fiers de la qualité et de la fiabilité de tous nos produits électroniques, mais en cas de nécessité de réparation ou pour toute question, le personnel de notre service clientèle est prêt à vous aider. Contactez-nous sur www.rcaaudiovideo.com.

ENREGISTREMENT D'ACHAT: Enregistrer votre produit en ligne nous permettra de communiquer avec vous pour tout avis de sécurité au sujet du produit en vertu du Federal Consumer Safety Act (Loi fédérale de protection du consommateur). **Enregistrez votre produit en ligne sur:**

WWW.RCAAUDIOVIDEO.COM. Cliquez sur Enregistrement produit et remplissez le court questionnaire.

Enregistristro del productotrement du produit

Gracias por comprar un producto RCA. Nos enorgullece la calidad y fiabilidad de todos nuestros productos electrónicos, pero si alguna vez necesita servicios técnicos o si tiene alguna pregunta, nuestro personal de atención al cliente está a su disposición para ayudarle. Comuníquese con nosotros en www.rcaaudiovideo.com.

REGISTRO DE COMPRA: El registro en línea nos permitirá comunicarnos con usted en el caso de tener que enviarle algún aviso de seguridad en virtud de la Ley Federal de Seguridad del Consumidor. **Registre el producto en línea en: WWW.RCAAUDIOVIDEO.COM. Haga clic en Registro del producto y responda al cuestionario.**

VR4210GB
VR4210GG





It is important to read this user manual prior to using your new product for the first time. Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.

Es importante leer este manual antes de usar por vez primera su equipo.

Important safety instructions

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE FOR FUTURE REFERENCE

 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.

Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

Precautions for the unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problems may result.
- Do not store the unit near fire, places with high temperature or in direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

Headset safety

To use a headset safely, please keep the following in mind:

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience ringing in your ears, turn down the volume or stop using the headset.
- Do not use a headset while driving a motorized vehicle or riding a bike. It may cause a traffic hazard and is illegal in many areas.
- Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that can't hear sounds around you.

FCC Information

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Power Supply

- (battery power) 2 x "AAA" (included)

Contents

Important safety instructions

IMPORTANT SAFETY INSTRUCTIONS.....	1
Important battery precautions	2
Ecology.....	2
Precautions for the unit.....	2
Headset safety	2

FCC Information

FCC Information.....	3
Power Supply	3

Contents	4
-----------------------	----------

Before you begin

Installing batteries.....	6
Using headphones and external microphone	6
Turning player on/off.....	6
Locking the player controls.....	6

General controls

Left Side Controls.....	8
Right Side Controls.....	8
Top Controls.....	8

Display Indicators.....	9
--------------------------------	----------

Setting date and time

To set the date and time.....	11
-------------------------------	----

Basic operations

Basic playback	11
Accessing Recorded File Information	11

Recording

Recording	12
Setting recording quality	12

Erasing files12

Settings

Accessing Settings menu	13
-------------------------------	----

Troubleshooting tips.....14

Warranty information

12 Month Limited Warranty	15
---------------------------------	----

Before you begin

Installing batteries




1. Remove the battery compartment cover.
2. Insert two "AAA" batteries (included) following the polarity marks in the battery compartment.
3. Reinstall the cover. When the battery level is low, a low battery message will appear on the display. Replace with new batteries when the low battery message appears.

Using headphones and external microphone

When headphones are connected, sound output from the speaker will be muted.

When an external microphone is connected, no recording can be made from the built-in microphone.

 
 
Turning player on/off

Slide  /  switch to .


Locking the player controls

To avoid accidental key activation, slide  /  towards  to lock the keys. Reverse the step to unlock.


General controls



Left Side Controls

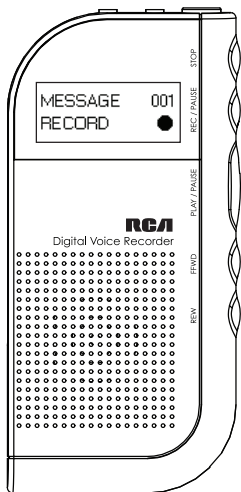 

Front

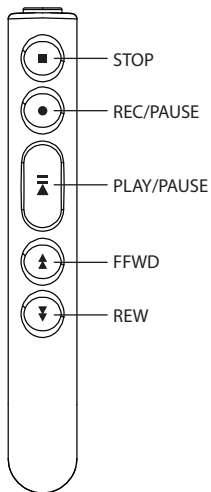 

Right Side Controls

Left Side Controls

 /  – Power on/off; locks/unlocks player controls.

- **VOLUME** + – Adjusts the volume level.

MENU – While in STOP MODE, press to access the Settings menu. While in STOP MODE, press and hold to display file information.

ERASE – Erases recorded files.

Right Side Controls

STOP ■ – Stops recording or playback. Quits the settings menu and goes to STOP MODE.

REC / PAUSE ● – Starts and pauses recording.

PLAY / PAUSE ►|| – Confirms a setting in the menu. Starts and pauses playback.

 
REW ◀◀ / ▶▶ **FFWD** – Skips to previous/next file; selects items in the menu; during file playback, press and hold to fast backward or forward.

Top Controls

Phones – External earphones jack.

Mic – External microphone jack.

Display Indicators

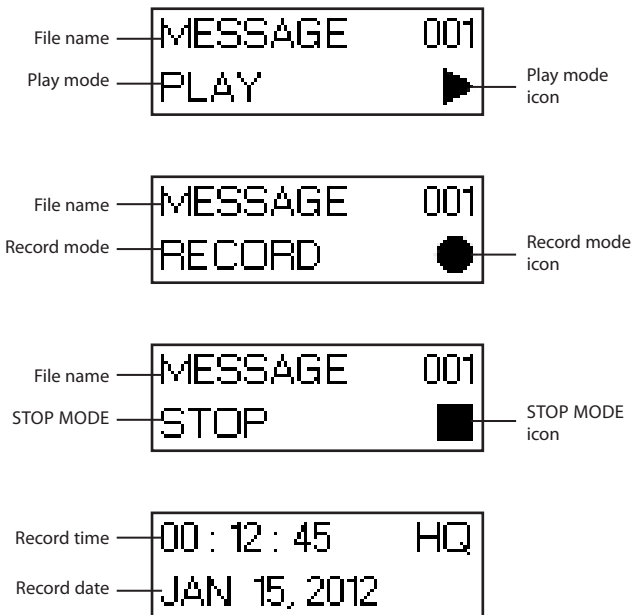

Record mode
menu option

REC MODE HQ
BEEP TONE ON

Beep tone
menu option

Sets Date
and Time

DATE & TIME
VERSION

Displays
firmware
version

Deletes all files on
the device

FORMAT

Setting date and time

With the date and time set, you can view the date and time of your recordings. Normal recording is still possible without setting the date and time. However, no correct recording date and time can be referenced for your recorded messages.

To set the date and time

1. While playback is stopped, press **MENU** to access the player menu.
2. Press **REW ◀◀ / ▶▶ FFWD** to select **DATE & TIME** and press **PLAY / PAUSE ▶▶** to confirm selection.
3. Press **REW ◀◀ / ▶▶ FFWD** to set the Month, Day, and Year respectively and press **PLAY / PAUSE ▶▶** to confirm each selection.
4. Press **REW ◀◀ / ▶▶ FFWD** to set the hour, minute, and AM/PM respectively and press **PLAY / PAUSE ▶▶** to confirm each selection.

Basic operations

Basic playback

To play back recorded files:

1. Press **REW ◀◀ / ▶▶ FFWD** to select files.
2. Press **PLAY / PAUSE ▶▶** button to start playback.
3. Press **PLAY / PAUSE ▶▶** button to pause playback, press again to resume.
4. You can press - **VOLUME +** to adjust volume.
5. Press **REW ◀◀ / ▶▶ FFWD** once to skip to the previous/next file. Press and hold **REW ◀◀ / ▶▶ FFWD** to fast backward/forward through the current file.
6. Press **STOP ■** to stop playback.

Accessing Recorded File Information

Press and hold **MENU** to view the date and time of the recording.

Recording

Recording

1. While in STOP MODE, press **REC / PAUSE ●** button to start recording.
2. To pause recording, press **REC / PAUSE ●** button once. The record icon will flash. Press again to resume recording.
3. To stop recording, press **STOP ■** .

Setting recording quality

Definition:

- **LP (Long Play)** – allows up to 140 hours recording.
- **HQ (High Quality)** – allows up to 70 hours recording.

Refer to Settings section for instructions on how to select recording quality.

Recording Tooltip: If the digital voice recorder is left in Record/ Pause mode for 30 minutes, the recording will be saved and the unit will shut down.



Erasing files

1. While in STOP MODE, press **REW ◀◀ / ▶▶ FFWD** to select the file that you wish to delete and press **ERASE**.
2. Press **PLAY / PAUSE ▶||** to confirm file deletion or press **STOP ■** to cancel file deletion.

Settings

Accessing Settings menu

1. While in STOP MODE, press **MENU** to access the Settings menu.
2. Press **REW ◀◀ / ▶▶ FFWD** to highlight the desired menu selection, then press the **PLAY / PAUSE ▶||** button to select that item.
3. Press **REW ◀◀ / ▶▶ FFWD** to adjust the setting, then press **PLAY / PAUSE ▶||** button to save the setting.
4. Press **STOP ■** to revert to STOP MODE.

Note: Follow the same procedure for all menu options below.



Menu options	Available settings
Rec Mode	HQ – highest recording quality, shorter recording time LP – highest recording time, lower recording quality
Beep Tone	On/Off
Date & Time	Set the current date and time
Version	Displays firmware version
Format	Deletes all files on the device

Troubleshooting tips

Player doesn't turn on

- Check that batteries are properly inserted and not exhausted.
- Make sure the battery compartment door is properly closed.

Can not record

- Make sure the LOCK function is not activated.
- Make sure memory is not full.
- You have recorded the maximum of 200 files. Try deleting some files to free up space.

Incorrect recording date and time during playback

- You may have not set the date and time before recording. Refer to the Setting date and time section.

No sound from speaker during playback

- Make sure volume is not set to 0.
- Make sure headphones are not connected.

Can not perform playback

- Make sure the LOCK function is not activated.

Can not delete recorded file(s)

- Make sure you follow each step under the Deleting Files section carefully.

Can not keep the saved settings

- If the batteries are removed, saved settings may be lost.

Warranty information

12 Month Limited Warranty

Applies to RCA Voice Recorders

VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is

authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- If your product is capable of storing content (such as an mp3 player, voice recorder, camcorder, digital photo frame, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. **IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE.** Product will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.
 - Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However **DO NOT** return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials.
- Ship to

**Audiovox Return Center
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788**

1-800-645-4994

For Canada Customers, please ship to:

Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5

Aucune personne et aucun représentant n'est autorisé à assumer au nom de la Compagnie toute obligation autre que celles indiquées dans la présente en lien avec la vente de ce produit.

Certaines provinces ne permettent pas les limites à la durée des garanties implicites ou l'exclusion des dommages indirects ou accessoires, alors certaines limites ou exclusions ci-dessus pourraient ne pas s'appliquer à vous. Cette Garantie vous donne certains droits spécifiques et vous pourriez avoir d'autres droits, qui varient selon la province.

Recommandations avant de retourner votre produit pour une réclamation sous garantie :

- Si votre appareil est en mesure d'enregistrer des contenus (comme un lecteur mp3, un enregistreur vocal, un caméscope, un cadre photo numérique, etc.), nous vous recommandons de faire des copies de sauvegarde des contenus enregistrés sur l'appareil régulièrement. Si possible, avant d'envoyer l'appareil, faites une copie de sauvegarde des contenus ou des données enregistrés sur l'appareil. De plus, il est recommandé de supprimer tout contenu personnel que vous ne voudriez pas rendre accessible à d'autres. IL EST PROBABLE QUE LES CONTENUS ET DONNÉES ENREGISTRÉS SUR L'APPAREIL SERONT PERDUS LORS DE LA RÉPARATION ET DU REFORMATAGE. AUDIOVOX N'ACCEPTÉ AUCUNE RESPONSABILITÉ POUR LES DONNÉES OU CONTENUS PERDUS OU POUR LA SÉCURITÉ DES DONNÉES OU CONTENUS PERSONNELS ENREGISTRÉS SUR L'APPAREIL RETOURNÉ. L'appareil sera renvoyé avec les réglages par défaut et sans contenus préenregistrés qui auraient pu être déjà installés lors de l'achat original. Le consommateur sera responsable de télécharger à nouveau des données et des contenus. Le consommateur sera responsable du rétablissement des réglages personnalisés.
- Emballez correctement votre appareil. Incluez toute télécommande, carte-mémoire, câble, etc. qui étaient fournis avec l'appareil. Par contre, NE retournez PAS les piles amovibles, même si les piles étaient fournies lors de l'achat original. Nous vous recommandons d'utiliser la boîte et le matériel d'emballage originaux. Envoyez à :

**Audiovox Return Center
Attn : Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788**

1-800-645-4994

Pour les consommateurs canadiens, veuillez envoyer votre appareil à :

Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Las ilustraciones contenidas dentro de esta publicación son para propósitos de ilustración solamente y están sujetas a cambio.

Las descripciones y las características presentadas en este documento son dadas a modo de indicación general y no de garantía. Con el fin de proporcionarle la más alta calidad de producto posible, nos reservamos el derecho a hacer mejoras o modificaciones sin previo aviso.

Les illustrations de cette publication sont fournies à titre indicatif seulement et sont sujettes à changement.

Les descriptions et les caractéristiques décrites dans ce document représentent une indication générale et ne constitue pas une garantie. Afin d'offrir la meilleure qualité de produit possible, nous nous réservons le droit de faire toute amélioration ou modification et ce, sans préavis.

Visit <http://store.rcaudiovideo.com> to find the best accessories for your products.

Visite <http://store.rcaudiovideo.com> donde encontrará los mejores accesorios para sus productos.

Visitez <http://store.rcaudiovideo.com> pour trouver les meilleurs accessoires pour vos appareils.



For Customer Service
Visit Our Website At
www.rcaudiovideo.com
Product Information, Photos,
FAQ's, User Manual

©2012 VOXX Accessories Corporation

A wholly-owned subsidiary of VOXX International Corporation

Una subsidiaria propiedad total de VOXX International Corporation

Une filiale en propriété exclusive de VOXX International Corporation

Indianapolis, IN

Trademark(s) ® Registered

Marca(s) ® Registrada(s)

Marque(s) ® Déposée(s)

Printed in China

Impreso en China

Imprimé en Chine

v1.0 (1.0.1.0) (EN/E/F)