

RCA

user manual guide de l'utilisateur manual de usuario

VR5210

Product registration

Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products but if you ever need service or have a question, our customer service staff stands ready to help. Contact us at www.rcaaudiovideo.com. **PURCHASE REGISTRATION:** Registering On-line will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act. **Register Online at:** WWW.RCAAUDIOVIDEO.COM. Click on Product Registration and Fill Out the Brief Questionnaire.

Enregistrement du produit

Merci d'avoir acheté un produit RCA. Nous sommes fiers de la qualité et de la fiabilité de tous nos produits électroniques, mais en cas de nécessité de réparation ou pour toute question, le personnel de notre service clientèle est prêt à vous aider. Contactez-nous sur www.rcaaudiovideo.com.

ENREGISTREMENT D'ACHAT: Enregistrer votre produit en ligne nous permettra de communiquer avec vous pour tout avis de sécurité au sujet du produit en vertu du Federal Consumer Safety Act (Loi fédérale de protection du consommateur). **Enregistrez votre produit en ligne sur:** WWW.RCAAUDIOVIDEO.COM. Cliquez sur Enregistrement produit et remplissez le court questionnaire.

Enregistristro del productotrement du produit

Gracias por comprar un producto RCA. Nos enorgullece la calidad y fiabilidad de todos nuestros productos electrónicos, pero si alguna vez necesita servicios técnicos o si tiene alguna pregunta, nuestro personal de atención al cliente está a su disposición para ayudarlo. Comuníquese con nosotros en www.rcaaudiovideo.com.

REGISTRO DE COMPRA: El registro en línea nos permitirá comunicarnos con usted en el caso de tener que enviarle algún aviso de seguridad en virtud de la Ley Federal de Seguridad del Consumidor. **Registre el producto en línea en:** WWW.RCAAUDIOVIDEO.COM. Haga clic en Registro del producto y responda al cuestionario.





It is important to read this user manual prior to using your new product for the first time. Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.

Es importante leer este manual antes de usar por vez primera su equipo.

Important safety instructions

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE FOR FUTURE REFERENCE

 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.

Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

Precautions for the unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problems may result.
- Do not store the unit near fire, places with high temperature or in direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

Headset safety

To use a headset safely, please keep the following in mind:

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience ringing in your ears, turn down the volume or stop using the headset.
- Do not use a headset while driving a motorized vehicle or riding a bike. It may cause a traffic hazard and is illegal in many areas.
- Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that can't hear sounds around you.

FCC Information

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Power Supply

- (battery power) 2 x "AAA"

Contents

Important safety instructions

IMPORTANT SAFETY INSTRUCTIONS.....	1
Important battery precautions	2
Ecology.....	2
Precautions for the unit.....	2
Headset safety	2

FCC Information

FCC Information.....	3
Power Supply.....	3

Contents	4
-----------------------	----------

Before you begin

Installing batteries.....	6
Using earphones and external microphone.....	6
Turning player on/off.....	6
Locking the player controls.....	6

General controls

Front Controls.....	8
Left Side Controls.....	8
Right Side Controls.....	8
Display.....	9

Setting date and time

To set the date and time.....	11
-------------------------------	----

Basic operations

Selecting folders and files.....	11
Basic playback.....	11

Recording

Recording	12
Setting recording quality	12
Setting recording mode	12
Accessing Recorded File Information	12

Deleting files13

Auto-Append

Auto-Append	14
-------------------	----

Formatting

To format the memory of the player.....	14
---	----

Settings

Accessing Settings menu	15
Accessing Date and Time menu	15


Troubleshooting tips.....16

Warranty information

12 Month Limited Warranty	17
---------------------------------	----

Before you begin

Installing batteries

1. Apply thumb pressure to slide the battery compartment cover, then remove the cover.
2. Insert two “AAA” batteries (not included) following the polarity marks in the battery compartment.
3. Reinstall the cover. Refer to the battery level indicator  on the display for battery's level. Replace with new batteries when the indicator is flashing.

Using earphones and external microphone

When earphones are connected, sound output from the speaker will be muted.

When an external microphone is connected, no recording can be made from the built-in microphone.

 
Turning player on/off

Slide  /  switch to .

Locking the player controls

To avoid accidental key activation, slide  /  towards  to lock the keys. Reverse the step to unlock.

General controls




Built-in
microphone



Left Side
Controls

 Recording
indicator

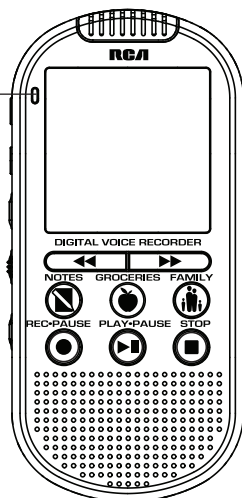

Front



Right Side
Controls

Front Controls

◀◀/▶▶ – Skips to previous/next file; selects items in the menu; press and hold to fast backward or forward

NOTES – Accesses the Notes folder

GROCERIES – Accesses the Groceries folder

FAMILY – Accesses the Family folder

REC•PAUSE – Starts and pauses recording

PLAY•PAUSE – Confirms a setting in the menu. Starts and pauses playback

STOP – Stops recording or playback. Quits the sub menu and goes to main menu

Left Side Controls

Mic – External microphone jack

Phones – External earphones jack

Play Speed – Changes playback speed

Dict/Conf – Sets Dictation or Conference recording mode

Menu – While in stop mode, press to access the Settings menu. While in stop mode, press and hold to display file information.

 
Right Side Controls

🔒 / 🔓 – Power on/off; locks/unlocks player controls


- **Volume +** – Adjusts the volume level

Erase – Erases files



Display

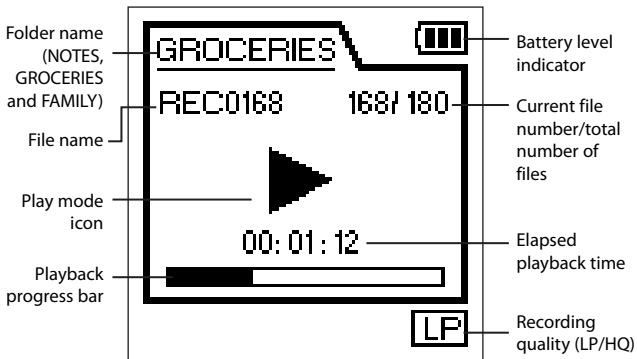

Play mode screenshot

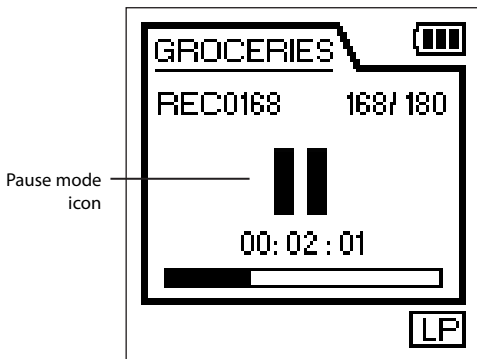 

Pause mode screenshot

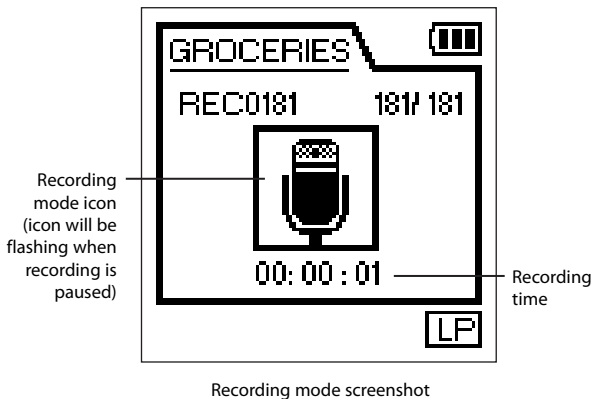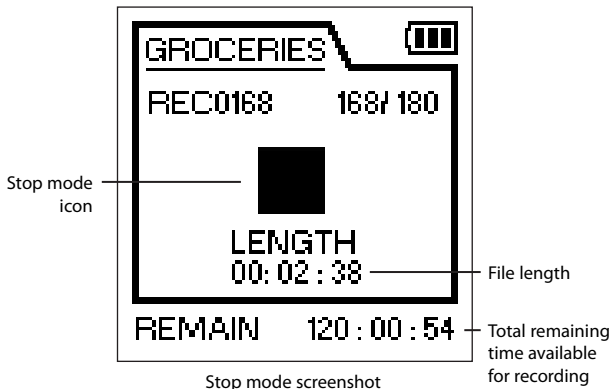  

Setting date and time

With the date and time set, you can always view the date and time of your recordings. Normal recording is still possible without setting the date and time. However, no correct recording date and time can be referenced in your recorded messages.

To set the date and time

1. While in stop mode, press **MENU** to access the Settings menu.
2. Press **◀/▶** to select **DATE+TIME** and press **PLAY•PAUSE** button to confirm selection.
3. Press **◀/▶** to select **SET TIME, SET DATE** and **TIME FORMAT** and press **PLAY•PAUSE** button to confirm selection.
4. Press **PLAY•PAUSE** button to select hour, minute, AM/PM, month, day and year. Press **◀/▶** to adjust the value and then press **PLAY•PAUSE** button to confirm selection.

Basic operations

Selecting folders and files

There are three dedicated buttons to select three folders: Notes, Groceries and Family.

1. While in stop mode, press **NOTES, GROCERIES** or **FAMILY** to access the corresponding folders.
2. Press **◀/▶** to select files.

Basic playback

To play back recorded files:

1. Select a folder and a file.
2. Press **PLAY•PAUSE** button to start playback.
3. Press **PLAY•PAUSE** button to pause playback, press again to resume.
4. You can press - **Volume** + to adjust volume.
5. While in stop mode or during playback, press **Play Speed** to select different playback speeds. Options are SLOW, NORMAL, and FAST.
6. Press **◀/▶** once to skip to the previous/next file. Press and hold **◀/▶** to fast backward/forward through the current file.
7. Press **STOP** to stop playback.

Accessing Recorded File Information

While in stop mode, press and hold **MENU** button to display recorded file information such as, date of recording, time of recording, recording mode, and record quality.

Recording

Recording

1. While in stop mode, press **REC-PAUSE** button to start recording. The red recording indicator will light illuminate. Recording time will be displayed once you begin recording.
2. To pause recording, press **REC-PAUSE** button once. The red recording indicator will be flashing. Press again to resume recording.
3. To stop recording, press **STOP**.

Setting recording quality

Definition:

- **LP (Long Play)** – allows up to 560 hours recording.
- **HQ (High Quality)** – allows up to 70 hours recording.

Refer to Settings section for instructions on how to select recording quality.

Setting recording mode

Definition:

- **CONF (Conference)** – Use in a more open area where recording source is far from the player.
- **DICT (Dictation)** – Use when recording source is close to the recorder.

Slide the **Dict/Conf** switch to select recording mode.



- You may slide the **Dict/Conf** switch during recording. However, your selection will only be effective starting from the next recording.
- For conferences, to obtain optimum recording quality, place the recorder with the microphone freely exposed to the sound source as close as convenient. A built-in automatic recording level control will set the optimum record level during manual recording. Avoid recording near unwanted noise sources, such as air conditioners or fans.
- If power supplied from the battery fails suddenly (e.g. batteries are removed accidentally) during recording, the recording in progress will be interrupted. The recorded file may also be corrupted and cannot be played back.

Deleting files

1. Select file to be deleted.
2. While in stop mode, press **ERASE**.
3. Press **◀/▶** to select one of the deleting options:
 - Delete the current file (Current file name)
 - Delete all files in the current folder (ALL FILES).
4. Press **PLAY•PAUSE** button to confirm selection.

Auto-Append

Auto-Append

The auto-append function (add to recording) provides an easy way to edit a file when you are recording a list (e.g. a grocery shopping list). You can add items to the end of a file by simply enabling the auto-append option.



- The **GROCERIES** folder is defaulted to the AUTO-APPEND ON mode. The **NOTES** and **FAMILY** folders are defaulted to AUTO-APPEND OFF mode. See Settings Section to enable AUTO-APPEND for **NOTES** and **FAMILY** folder.
- While in stop mode, the most recent file will be appended when you press **REC•PAUSE** button unless you press ◀▶ to select a desired file.

To append voice data to the end of a file:

1. Ensure that the Auto-Append menu option is enabled for the currently selected folder. Refer to the Settings section.
2. While in stop mode, press **NOTES, GROCERIES** or **FAMILY** to access the corresponding folders.
3. Press ◀▶ to select files.
4. While in stop mode, press **REC•PAUSE** button to start recording. The record icon will be shown and the recording will begin from the end of the currently selected file.
5. Press **STOP** to stop recording.

Formating

To format the memory of the player

1. Select Format in the Settings menu. Refer to the Settings section for details.
2. When Format is selected, **ALL DATA IN MEMORY WILL BE PERMANENTLY REMOVED** will be shown.
3. Press **PLAY•PAUSE** button to confirm your selection and start the formatting.

Formating the internal memory may be required if internal memory has become corrupted.



Settings

Accessing Settings menu

1. While in stop mode, press **MENU** to access the Settings menu.
2. Press **◀/▶** to select Settings and press **PLAY•PAUSE** button to confirm selection.
3. Press **◀/▶** to highlight the desired item, then press **PLAY•PAUSE** button to select that item.
4. Press **◀/▶** to adjust the value, then press **PLAY•PAUSE** button to save the setting.
5. Press **STOP** to revert to the main screen.

Menu options	Available settings
Quality	HQ – highest recording quality, shorter recording time LP – highest recording time, lower recording quality
Beep Tone	On/Off
Auto-Append	Groceries, Family, Notes On/Off
Format	Confirm or Exit
Reset	Confirm or Exit
Version	Show the current firmware version

Accessing Date and Time menu

1. While in stop mode, press **MENU** to access the Settings menu.
2. Press **◀/▶** to select **DATE+TIME** and press **PLAY•PAUSE** button to confirm selection.
3. Press **◀/▶** to highlight **SET TIME**, **SET DATE** or **TIME FORMAT**, then press **PLAY•PAUSE** button to confirm selection.
4. Press **◀/▶** to adjust the value, then press **PLAY•PAUSE** button to confirm.
5. Press **PLAY•PAUSE** button to revert to the main screen.

Troubleshooting tips

Player doesn't turn on

- Check that batteries are properly inserted and not exhausted.
- Make sure the battery compartment door is properly closed.

Can not record

- Make sure the LOCK function is not activated.
- Make sure memory is not full.
- You have recorded 200 files in one folder. Try to record in a new folder.

Incorrect recording date and time during playback

- You may have not set the date and time before recording. Refer to the Setting date and time section.

No sound from speaker during playback

- Make sure volume is not set to 0.
- Headphones should not be connected.

Can not activate the player after sliding / switch to

- Remove the batteries to reset the player.

Recordable time becomes shorter

- You may have set the recording quality to 'High Quality'. Refer to the Setting recording quality section.

Can not perform playback

- Make sure you have selected a folder which contains recorded messages.
- Make sure the LOCK function is not activated.

Can not delete recorded file(s)

- Make sure you follow each step under the Deleting Files section carefully.

Can not keep the saved settings

- If the batteries are removed, saved settings may be lost.

Warranty information

12 Month Limited Warranty

Applies to RCA Voice Recorders

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is

authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- If your product is capable of storing content (such as an mp3 player, voice recorder, camcorder, digital photo frame, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. **IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE.** Product will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.
- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However **DO NOT** return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to

**Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788**

1-800-645-4994

For Canada Customers, please ship to:

Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5