


ADV-2010 QUICKSTART GUIDE

ATK2010 REAR SEAT ENTERTAINMENT SYSTEM


CONTROL LOCATIONS

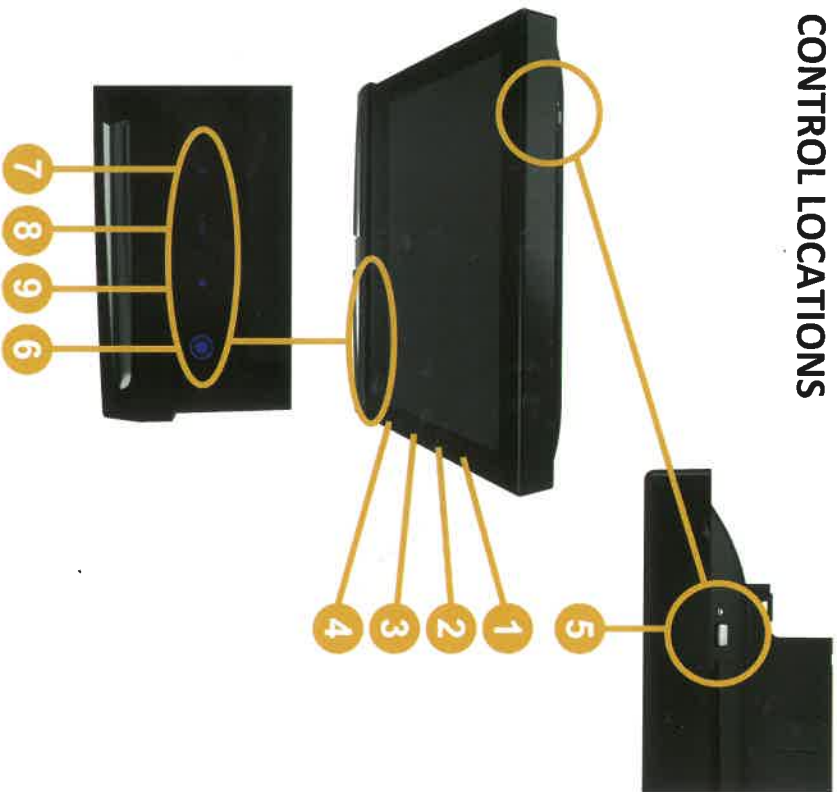

1. USB 2.0 input (2 amp charging)
2. HDMI input (MHL compatible)
3. A/V input jack (analog 3.5MM)
4. Headphone jack output (wired)
5. Disc slot/Eject button
6. Power button-turns system power on/off.
7. Source button-select media source for playing media (ie:DVD, AV input, MHL/HDMI, Wireless screen mirroring, USB)
8. Play/Pause-starts/pauses media source selected.
9. Stop-stops media that is playing.

Remote Control Buttons/Functions

To control monitor A, press the A button first.
To control monitor B, press the B button first.
(SEE WIRELESS HEADPHONE DETAIL PAGE FOR MORE INFO)

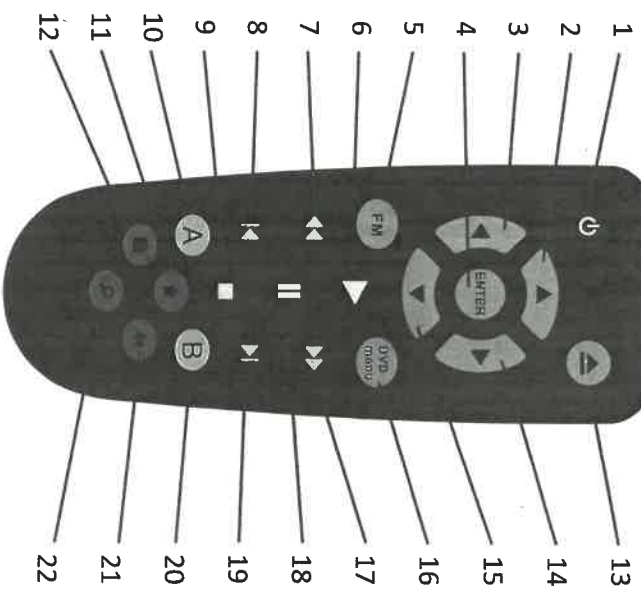

1. POWER - turns power on/off
2. UP - navigate selection up
3. LEFT - navigate selection left
4. ENTER - accepts selection
5. FM - turns FM transmitter on/ off (station can also be changed when button is depressed)
6. PLAY - select to play media
7. REVERSE - reverses play (fast)
8. PREVIOUS - selects previous track
9. STOP - stops media from playing
10. A - depress to control A monitor
11. HOME - back to home page
12. MENU - back to home page
13. EJECT - ejects disc
14. RIGHT - navigate selection right.
15. DOWN - navigate selection down
16. DVD MENU - displays DVD "ROOT MENU"
17. FORWARD - plays media fast forward
18. PAUSE - pauses media being played
19. NEXT - selects next track
20. B - depress to control B monitor
21. BACK - back to previous page
22. SEARCH - back to home page