 


FCC Information

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.
Date of Purchase
Place of Purchase
Serial No.

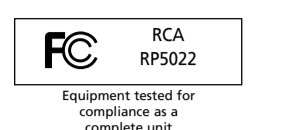

Equipment tested for compliance as a complete unit

This Class B digital apparatus complies with Canadian ICES-003.

Appareil numérique de classe B conforme à la norme du MCM-003 du Canada

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THE PRODUCT TO WATER OR MOISTURE.

FCC Information

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to

FCC Information

correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Also, the Federal Communications Commission has prepared a helpful booklet, "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 006-900-0034-4 when ordering copies.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final reference on all products and operational details should any discrepancies arise in other languages.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

Maintenance

Clean the unit with a soft cloth, or a damp chamois leather. Never use solvents.

Precautions for the Unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problem may be reactivated.
- Avoid shock to the unit especially during recording. Recorded data can be damaged.
- Do not store the unit near fire, places with high temperature or places with direct sunlight.

FCC Information

Do not operate or store unit in places with frequent static electricity or electrical noise

- speaker, TV set).
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.
- Do not expose this appliance to rain or moisture.

Precautions for Batteries

- If you do not use the unit for more than one month, be sure to remove the batteries to avoid leakage.
- When installing batteries, be sure that the polarities are correct. Reversing polarity may cause personal injury and damage to the batteries.
- Never mix new batteries with old ones. Do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- Do not dispose of in fire.
- Do not charge batteries which are not intended to be recharged.

Power Supply

(battery power) 2 x "AAA"

ESD Remark:
In case of malfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

 
Comercializadora Thomson de México, S.A. de C.V.
Alvaro Obregón No. 151, Pto 13,
Col. Roma, Delegación Cuauhtémoc,
C.P. 06700, México, D.F.
Teléfono: 52-55-11-0208380
RFC: CTM-98023-K55

Thomson Inc.
P.O. Box 1976, Indianapolis, IN 46206-1976
©2007 Thomson Inc.
Trademarks © Registered
Marca(s) © Registrada(s)
Marque(s) © Déposé(s)
www.raudiovideo.com
Printed in China/Impreso en China

5642962E (ENE)




User manual
Manual de usuario

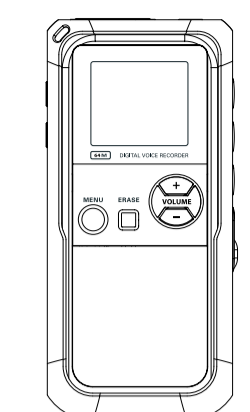


RP5022

It is important to read this instruction book prior to using your new product for the first time. It is important to read this manual prior to use your new product to avoid any damage.

 
General Controls

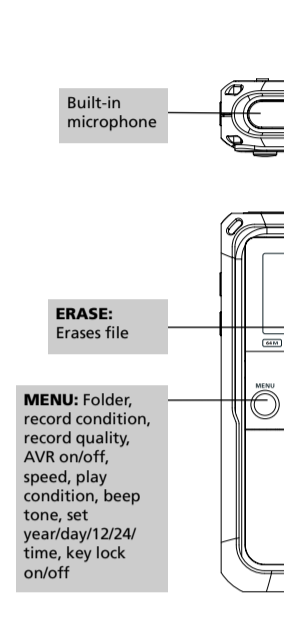


General Controls

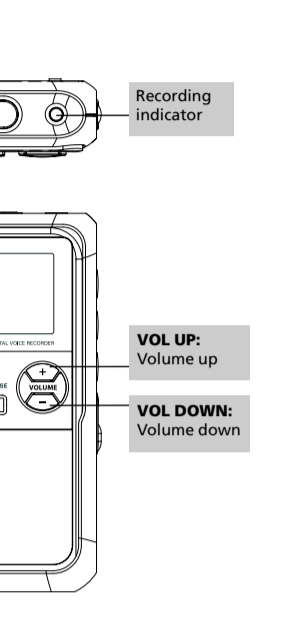 


General Controls

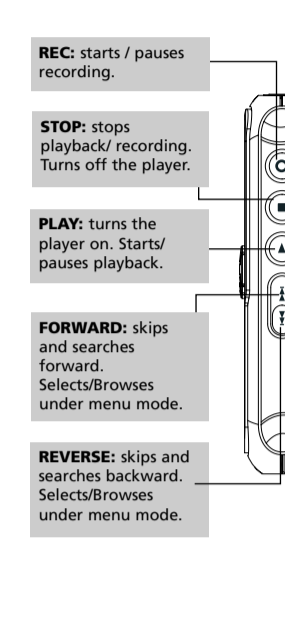 


General Controls

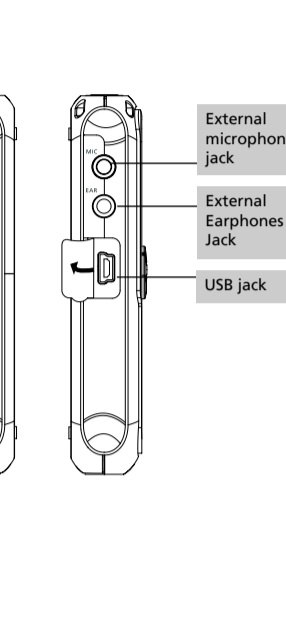 


General Controls

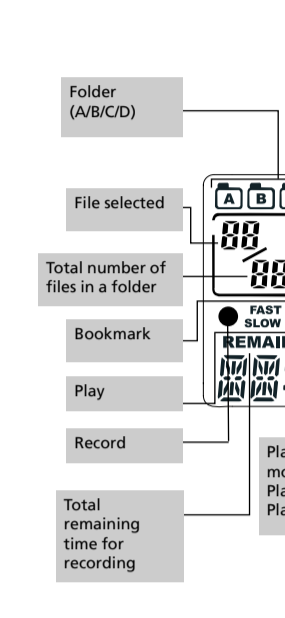 


Display Messages

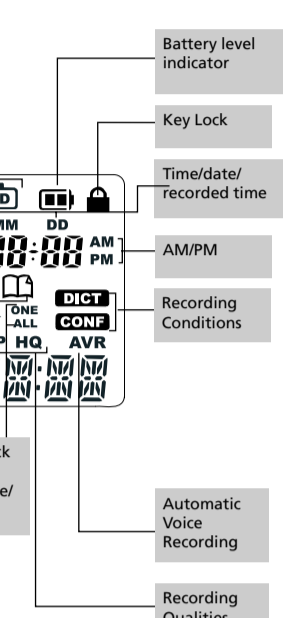 

Display Messages

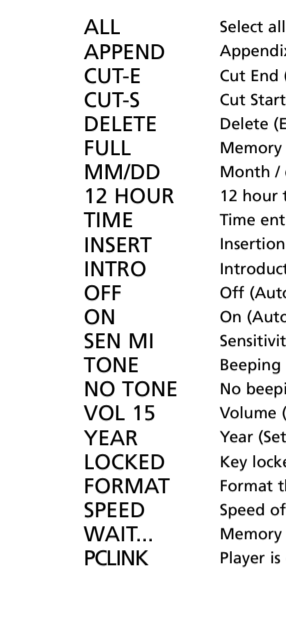 

Display Messages

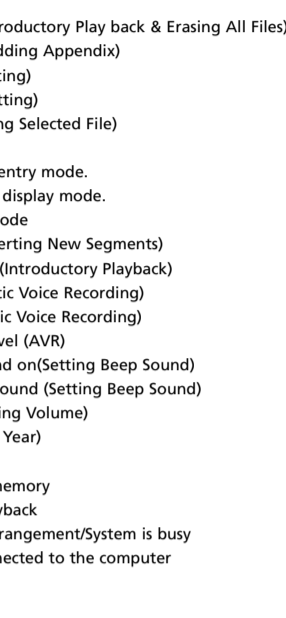 

Before You Begin

Unpacking Your Player
You should have the following:
• one voice recorder
• one USB cable
• one user manual

Before You Begin

Using earphones and external microphone
When earphones are connected, sound output from speaker will be muted.
When external microphone is connected, no record can be made from built-in microphone.

Before You Begin

2. Press REVERSE or FORWARD to set beep sound ON/OFF.
3. Press MENU to confirm selection.

Setting the Time

With this function, you can always read on the display the recording date and time of your recorded messages. Follow the steps below for time setting.

Setting the Time

REVERSE or FORWARD to increase/decrease the number, press MENU to confirm.

Bookmark

Creating a bookmark
This feature allows you to create an interception point in the recorded message for quick reference.

Bookmark

Deleting a bookmark
1. Select folder (A/B/C/D).
2. Select file.

Recording Mode

Setting Recording Mode
You can select between two recording modes - manual recording and AVR (automatic voice recording).

Recording Mode

Setting Recording Quality
You can select between two recording qualities. Default is HQ.

Recording Mode

Setting Recording Condition
You can select between two recording conditions. Default is DICT.

Recording Mode

Tip: For conferences, to obtain optimum recording quality, place the recorder with the microphone freely exposed to the sound source as close as convenient.

Recording Mode

If power supplied from the battery fails suddenly (e.g. batteries are removed accidentally) during recording, the memory which was used for the recording will not be readable or usable.

Erasing file/folder

Erasing selected file
You can delete a file by the following steps:

Erasing file/folder

Erasing all files in a folder
You can delete all files in a specific folder by the following steps.

Advanced operation

Insert
You can insert new segments into a file without erasing previously recorded content.

Advanced operation

Append
You can add appendix (e.g. reminder, supplementary information) to the end of the file.

Advanced operation

Cut
You can erase unwanted parts from your recording.

Advanced operation

Format
(Caution! All data inside the memory will be erased)

Advanced operation

Connect to the Computer
You can format the internal memory when needed (e.g. compatibility problem, etc.)

Connecting to the Computer

Using the Digital Voice Manager
The RCA Digital Voice Manager can perform playback, organize your bookmarks of the recorded files and create self-executable voice file from the recorded files.

Connecting to the Computer

Playback and Editing Operations
1. To organize your files, click the corresponding buttons to cut, delete, copy and paste a file (or a folder) and drop.

Connecting to the Computer

Transfer Files with the Digital Voice Manager (Voice Files Only)
Your player is associated with a drive letter. You can drag the voice files you want to transfer to your player to the A/B/C/D folder in the drive.

Connecting to the Computer

Using your player as a file storage device
The player can function as a detachable data storage device. You can take along your favorite pictures and documents wherever you go.

Connecting to the Computer

Disconnecting from the Computer
After you have copied files to or from the player, you can disconnect the player from the computer.

Connecting to the Computer

Player doesn't turn on
• Check that batteries are properly inserted and not exhausted.

Connecting to the Computer

Cannot activate the player after pressing on keys
• There may be software problems. Remove the batteries to reset the player.

Connecting to the Computer

Recordable time becomes shorter
• You may have set the recording quality to 'High Quality', refer to section 'Setting Recording Quality'.

Connecting to the Computer

Display keeps flashing when player is off
• You may not have set the time. Refer to section on Time Setting.

Connecting to the Computer

Cannot record
• Make sure LOCK function is not activated.

Connecting to the Computer

Cannot erase recorded file(s)
• Make sure you follow each step under section "Erasing Selected File" carefully.

U.S. Limited Warranty

What your warranty covers:
• Defects in materials or workmanship.

U.S. Limited Warranty

For how long after your purchase:
• One year from date of purchase.

U.S. Limited Warranty

Limitation of Warranty:
• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED.

Note

How state law relates to this warranty:
• Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

Note

If you purchased your product outside the USA:
This warranty does not apply. Contact your dealer for warranty information.

Note

What your warranty does not cover:
• Customer instruction. Your Owner's Manual provides information regarding operating instructions and user controls.

Note

Cannot edit
• Make sure LOCK function is not activated.

Note

Cannot perform playback
• Make sure you have selected folder with recorded messages.

Note

Incorrect recording date and time during playback
• You may have not set the date and time before recording. Refer to section 'Time Setting'.

Note

No sound from speaker during playback
• Make sure volume is not set to 0.

Note

Cannot save the saved setting
• If the batteries are removed, saved settings may be removed.