



wireless audio system

quick start guide


Congratulations on your purchase of the Acoustic Research ARS70 wireless audio system! The ARS70 makes it easy to share your music whenever you want, with Bluetooth® wireless connectivity and a built-in auxiliary input. This Quick Start Guide helps get you started.

For more information about your new Wireless Audio System, see the User Guide.

If you have any questions about this product, visit Acoustic-Research.com or call our toll-free help line at 1-800-732-6866.

Step 1: Unpack

Make sure the following items came in this package.

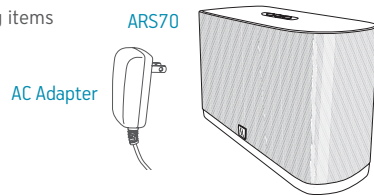

Step 2: Plug In


Plug the small end of the provided AC adapter into the DC 12V jack on the back of the ARS70. Plug the other end into a working wall outlet or surge protector.



ARS70 NA_Q5G-00

Step 3: Turn On

Press the  button on the top of the ARS70.

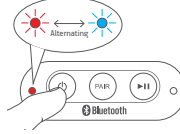

If this is the first time you're turning the unit on: The ARS70 goes directly to pairing mode—the indicator light blinks red and blue.

If you've turned the unit on before: The indicator light next to the power button starts flashing blue (the ARS70 is trying to connect to the last Bluetooth device).


Step 4: Pair and Connect



Enable Bluetooth on your device (smartphone, MP3 player, etc.).

If this is the first time you're turning the unit on: The indicator light should still be blinking red and blue.

If it isn't blinking red/blue: Press and hold the PAIR button on the top of the ARS70. The indicator light blinks red and blue and the ARS70 emits an audible signal telling you that it's in pairing mode. You can release the PAIR button now.

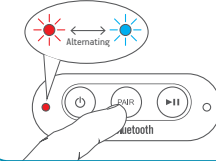

Bluetooth Wireless Connection Tips


- Make sure the Bluetooth capability of your device is turned on and discoverable.
- The ARS70 Bluetooth wireless connection works up to a range of roughly 33 feet (10 meters). This range may vary, however, based on other factors, such as room layout, wall material, obstacles, your device's Bluetooth performance, etc. If you're having problems connecting to the ARS70, move closer to it.
- Make sure your device supports audio transfer A2DP.
- Make sure you don't have anything plugged into the ARS70 aux audio input.
- If your device asks you for a password to connect to the ARS70, use "0000".

Questions? Call 1-800-732-6866 or visit Acoustic-Research.com




Choose "AR ARS70" on your device.

IMPORTANT: The process of enabling Bluetooth and connecting varies from device to device. See your device's owners manual for more information and specific instructions.

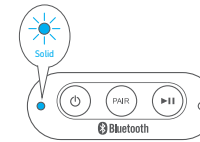


The speaker indicator light turns solid blue and the speaker emits an audible signal when you're connected.

Step 5: Stream

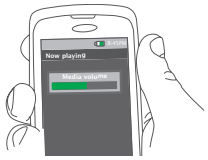

Reduce your device's volume for music to 50%.

Note: This is to make sure the sound from the speaker isn't too loud when you start streaming. The ARS70 has no volume controls of its own. Its volume depends entirely on the volume setting on your device.

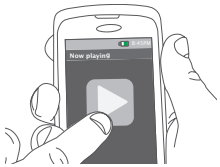


Start playing music or other audio on your device. Within seconds, the speaker starts streaming the audio wirelessly via Bluetooth.


To adjust the volume of your audio: Use the Volume controls on your device.

Tour of the ARS70


Top Panel Controls

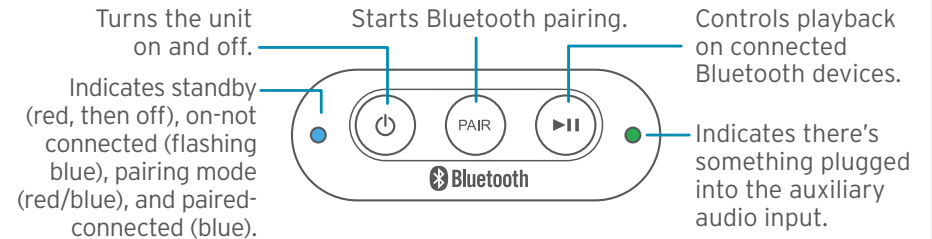


Back Panel Inputs

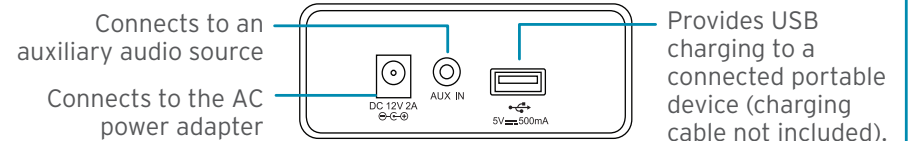

Using the Auxiliary Audio In

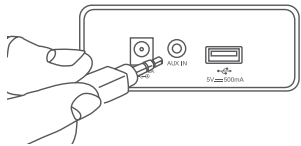

Use a mini-jack audio cable (not included) to connect the audio output from your device to the audio input on the ARS70 back panel.

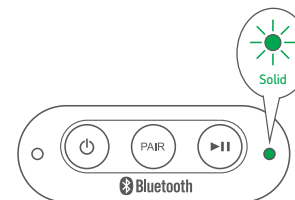

The indicator light on the right side of the ARS70 top turns green when you have something connected to the auxiliary input. The ARS70 defaults to this auxiliary input when something is plugged into the AUX IN jack. If you want to hear Bluetooth playback, you must unplug the cable from the ARS70 AUX IN jack.